

Компания Полель - официальный
дистрибьютор **SANYO**

www.poulel.ru
www.sanyo-airservice.ru

т. (495) 101-30-99

Кондиционеры
Сплит-системы
Полупромышленные кондиционеры
Мультizonальные **VRF** системы кондиционирования
Чиллеры

TECHNICAL & SERVICE MANUAL

SANYO

SAP-K161GJA + SAP-C161GA
 + SAP-C161JA

SAP-K181GJA + SAP-C181GA
 + SAP-C181JA

SAP-K181MBA + SAP-C181MA
 + SAP-C181BA

SAP-K241GJA + SAP-C241GA
 + SAP-C241JA

SAP-K241MBA + SAP-C241MA
 + SAP-C241BA


FILE NO.

SPLIT SYSTEM AIR CONDITIONER

Indoor Model No.	Product Code No.	Destination
SAP-K161GJA-S	1 852 070 38	General (50/60Hz)
SAP-K181GJA-S	1 852 070 39	General (50/60Hz)
SAP-K181MBA-S	1 852 070 40	Middle East (50/60Hz)
SAP-K241GJA-S	1 852 070 42	General (50/60Hz)
SAP-K241MBA-S	1 852 070 43	Middle East (50/60Hz)


Outdoor Model No.	Product Code No.	Destination
SAP-C161GA-S	1 852 070 55	General (50Hz)
SAP-C161JA-S	1 852 070 56	General (60Hz)
SAP-C181GA-S	1 852 070 57	General (50Hz)
SAP-C181JA-S	1 852 069 62	General (60Hz)
SAP-C181MA-S	1 852 070 58	Middle East (50Hz)
SAP-C181BA-S	1 852 070 60	Middle East (60Hz)
SAP-C241GA-S	1 852 070 61	General (50Hz)
SAP-C241JA-S	1 852 070 62	General (60Hz)
SAP-C241MA-S	1 852 070 63	Middle East (50Hz)
SAP-C241BA-S	1 852 070 65	Middle East (60Hz)

Indoor Unit

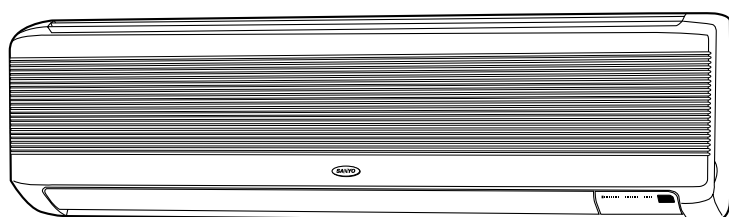

SAP-K161GJA
 SAP-K181GJA
 SAP-K181MBA
 SAP-K241GJA
 SAP-K241MBA

Outdoor Unit

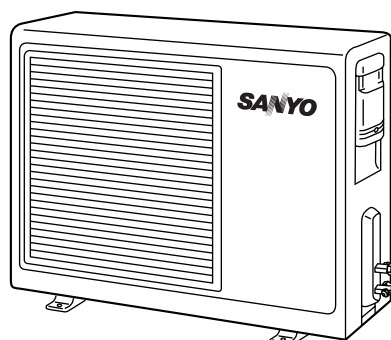

SAP-C161GA
 SAP-C161JA
 SAP-C181GA
 SAP-C181JA
 SAP-C181MA
 SAP-C181BA
 SAP-C241GA
 SAP-C241JA
 SAP-C241MA
 SAP-C241BA

Important!

Please Read Before Starting

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

For safe installation and trouble-free operation, you must:

- Carefully read this instruction booklet before beginning.
- Follow each installation or repair step exactly as shown.
- Observe all local, state, and national electrical codes.
- Pay close attention to all warning and caution notices given in this manual.



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

If Necessary, Get Help

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

In Case of Improper Installation

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

Special Precautions

WARNING

When Wiring



ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause accidental injury or death.
- Ground the unit following local electrical codes.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.

When Transporting

Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.

When Installing...

...In a Ceiling or Wall

Make sure the ceiling/wall is strong enough to hold the units weight. It may be necessary to construct a strong wood or metal frame to provide added support.

...In a Room

Properly insulate any tubing run inside a room to prevent "sweating" that can cause dripping and water damage to walls and floors.

...In Moist or Uneven Locations

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.

...In an Area with High Winds

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

...In a Snowy Area (for Heat Pump-type Systems)

Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow vents.

When Connecting Refrigerant Tubing

- Use the flare method for connecting tubing.
- Apply refrigerant lubricant to the matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for a leak-free connection.
- Check carefully for leaks before starting the test run.

When Servicing

- Turn the power off at the main power box (mains) before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.

Others



CAUTION

- Ventilate any enclosed areas when installing or testing the refrigeration system. Escaped refrigerant gas, on contact with fire or heat, can produce dangerously toxic gas.
- Confirm upon completing installation that no refrigerant gas is leaking. If escaped gas comes in contact with a stove, gas water heater, electric room heater or other heat source, it can produce dangerously toxic gas.

Table of Contents

	Page
1. OPERATING RANGE	1
2. SPECIFICATIONS	
2-1. Unit Specifications	2
2-2. Major Component Specifications	8
2-3. Other Component Specifications	17
3. DIMENSIONAL DATA	18
4. REFRIGERANT FLOW DIAGRAM	21
5. PERFORMANCE DATA	
5-1. Performance charts	23
5-2. Air Throw Distance Chart	26
5-3. Cooling Capacity	27
6. ELECTRICAL DATA	
6-1. Electrical Characteristics	33
6-2. Electric Wiring Diagrams	36
7. INSTALLATION INSTRUCTIONS	
7-1. Installation Site Selection	41
7-2. Remote Control Unit Installation Position	43
7-3. Recommended Wire Length and Diameter	44
8. FUNCTION	
8-1. Room Temperature Control	45
8-2. Dry Operation	46
8-3. Freeze Prevention	46
8-4. Outdoor Fan Speed Control	47
9. TROUBLESHOOTING	
9-1. Check before and after troubleshooting	48
9-2. Air conditioner does not operate	49
9-3. Some part of air conditioner does not operate	53
9-4. Air conditioner operates, but abnormalities are observed	55
9-5. If a sensor is defective	56
10. CHECKING ELECTRICAL COMPONENTS	
10-1. Measurement of Insulation Resistance	57
10-2. Checking Continuity of Fuse on PCB Ass'y	58
10-3. Checking Motor Capacitor	58
11. MAINTENANCE	
11-1. Changing Address of Remote Control Unit in Indoor Unit	59
APPENDIX INSTRUCTION MANUAL	60

1. OPERATING RANGE

■ 50Hz models

Outdoor Unit **SAP-C161GA**
SAP-C181GA
SAP-C241GA

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp.
Cooling	Maximum	32°C D.B. / 23°C W.B.	43°C D.B.
	Minimum	19°C D.B. / 14°C W.B.	19°C D.B.

Outdoor Unit **SAP-C181MA**
SAP-C241MA

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp.
Cooling	Maximum	32°C D.B. / 23°C W.B.	52°C D.B.
	Minimum	19°C D.B. / 14°C W.B.	19°C D.B.

■ 60Hz models

Outdoor Unit **SAP-C161JA**
SAP-C181JA
SAP-C241JA

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp.
Cooling	Maximum	32°C D.B. / 23°C W.B.	43°C D.B.
	Minimum	19°C D.B. / 14°C W.B.	19°C D.B.

Outdoor Unit **SAP-C181BA**
SAP-C241BA

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp.
Cooling	Maximum	29°C D.B. / 19°C W.B.	54°C D.B.
	Minimum	19°C D.B. / 14°C W.B.	19°C D.B.

2. SPECIFICATIONS

2-1. Unit Specifications

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161GA**

Power Source		220-240V Single phase 50Hz					
Voltage rating		220/230/240 V					
Performance		Cooling					
Capacity	kW	4.70	/	4.70	/	4.70	
	BTU/h	16,000	/	16,000	/	16,000	
Air circulation (High)		m³/h		760			
Moisture removal (High)		Liters/h		2.3			
Electrical Rating		Cooling					
Available voltage range		V		198 ~ 264			
Running amperes		A		7.2	/	7.2 / 7.3	
Power input		W		1,540	/	1,570 / 1,610	
Power factor		%		97	/	95 / 92	
C.O.P.		W/W		3.1	/	3.0 / 2.9	
Compressor locked rotor amperes		A		38	/	40 / 41	
Features							
Controls / Temperature control		Microprocessor / I.C. thermostat					
Control unit		Wireless remote control unit					
Timer		1-hour OFF / 12-hours ON or OFF					
Fan speeds		Indoor / Outdoor		3 and Auto / Auto(Hi, Lo)			
Airflow direction (Indoor)		Horizontal		Manual			
		Vertical		Auto			
Air filter		Washable, Anti-Mold					
Compressor		Rotary (Hermetic)					
Refrigerant / Amount charged at shipment		g		R22 / 1,090			
Refrigerant control		Capillary tube					
Operation sound		Indoor : Hi / Me / Lo		dB-A		41 / 38 / 36	
		Outdoor : Hi		dB-A		53	
Refrigerant tubing connections		Flare type					
Max. allowable tubing length at shipment		m		7.5			
Refrigerant tube diameter		Narrow tube		mm (in.)		6.35(1/4)	
		Wide tube		mm (in.)		12.7(1/2)	
Refrigerant tube kit / Accessories		Optional / Hanging wall bracket					
Dimensions & Weight				Indoor Unit		Outdoor Unit	
Unit dimensions	Height	mm		285		630	
	Width	mm		995		810	
	Depth	mm		196		275	
Package dimensions	Height	mm		276		704	
	Width	mm		1,070		953	
	Depth	mm		363		369	
Weight	Net	kg		12.0		43.0	
	Shipping	kg		15.0		47.0	
Shipping volume	m³		0.11		0.25		

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161JA**

Power Source		220V Single phase 60Hz	
Voltage rating		220 V	
Performance		Cooling	
Capacity	kW	4.70	
	BTU/h	16,000	
Air circulation (High)		m ³ /h	760
Moisture removal (High)		Liters/h	2.3
Electrical Rating		Cooling	
Available voltage range	V	198 ~ 242	
Running amperes	A	8.1	
Power input	W	1,770	
Power factor	%	99	
C.O.P.	W/W	2.7	
Compressor locked rotor amperes	A	41	
Features			
Controls / Temperature control		Microprocessor / I.C. thermostat	
Control unit		Wireless remote control unit	
Timer		1-hour OFF / 12-hours ON or OFF	
Fan speeds	Indoor / Outdoor	3 and Auto / Auto(Hi, Lo)	
Airflow direction (Indoor)	Horizontal	Manual	
	Vertical	Auto	
Air filter		Washable, Anti-Mold	
Compressor		Rotary (Hermetic)	
Refrigerant / Amount charged at shipment		g	R22 / 1,150
Refrigerant control		Capillary tube	
Operation sound	Indoor : Hi / Me / Lo	dB-A	41 / 38 / 36
	Outdoor : Hi	dB-A	51
Refrigerant tubing connections		Flare type	
Max. allowable tubing length at shipment		m	7.5
Refrigerant tube diameter	Narrow tube	mm (in.)	6.35(1/4)
	Wide tube	mm (in.)	12.7(1/2)
Refrigerant tube kit / Accessories		Optional / Hanging wall bracket	
Dimensions & Weight		Indoor Unit	Outdoor Unit
Unit dimensions	Height	mm	285
	Width	mm	995
	Depth	mm	196
Package dimensions	Height	mm	276
	Width	mm	1,070
	Depth	mm	363
Weight	Net	kg	12.0
	Shipping	kg	15.0
Shipping volume		m ³	0.11

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181GA** **SAP-C181MA**

Power Source		220-240V Single phase 50Hz				
Voltage rating		220/230/240 V				
Performance		Cooling				
Capacity	kW	5.15	/	5.15	/	5.15
	BTU/h	17,600	/	17,600	/	17,600
Air circulation (High)		m ³ /h				760
Moisture removal (High)		Liters/h				2.7
Electrical Rating		Cooling				
Available voltage range	V	198 ~ 264				
Running amperes	A	9.6	/	9.5	/	9.5
Power input	W	2,030	/	2,060	/	2,110
Power factor	%	96	/	94	/	93
C.O.P.	W/W	2.5	/	2.5	/	2.4
Compressor locked rotor amperes	A	45	/	46	/	48
Features						
Controls / Temperature control		Microprocessor / I.C. thermostat				
Control unit		Wireless remote control unit				
Timer		1-hour OFF / 12-hours ON or OFF				
Fan speeds	Indoor / Outdoor	3 and Auto / Auto(Hi, Lo)				
Airflow direction (Indoor)	Horizontal	Manual				
	Vertical	Auto				
Air filter		Washable, Anti-Mold				
Compressor		Rotary (Hermetic)				
Refrigerant / Amount charged at shipment	g	R22 / 1,140				
Refrigerant control		Capillary tube				
Operation sound	Indoor : Hi / Me / Lo	dB-A		41 / 38 / 36		
	Outdoor : Hi	dB-A		53		
Refrigerant tubing connections		Flare type				
Max. allowable tubing length at shipment		m				7.5
Refrigerant tube diameter	Narrow tube	mm (in.)		6.35(1/4)		
	Wide tube	mm (in.)		12.7(1/2)		
Refrigerant tube kit / Accessories		Optional / Hanging wall bracket				
Dimensions & Weight		Indoor Unit		Outdoor Unit		
Unit dimensions	Height	mm	285	630		
	Width	mm	995	810		
	Depth	mm	196	275		
Package dimensions	Height	mm	276	704		
	Width	mm	1,070	953		
	Depth	mm	363	369		
Weight	Net	kg	12.0	47.5		
	Shipping	kg	15.0	52.0		
Shipping volume		m ³	0.11	0.25		

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181JA** **SAP-C181BA**

Power Source		220V Single phase 60Hz	
Voltage rating		220 V	
Performance		Cooling	
Capacity	kW	5.15	
	BTU/h	17,600	
Air circulation (High)		m ³ /h	760
Moisture removal (High)		Liters/h	2.7
Electrical Rating		Cooling	
Available voltage range	V	198 ~ 242	
Running amperes	A	7.8	
Power input	W	1,700	
Power factor	%	99	
C.O.P.	W/W	3.0	
Compressor locked rotor amperes	A	41	
Features			
Controls / Temperature control		Microprocessor / I.C. thermostat	
Control unit		Wireless remote control unit	
Timer		1-hour OFF / 12-hours ON or OFF	
Fan speeds	Indoor / Outdoor	3 and Auto / Auto(Hi, Lo)	
Airflow direction (Indoor)	Horizontal	Manual	
	Vertical	Auto	
Air filter		Washable, Anti-Mold	
Compressor		Rotary (Hermetic)	
Refrigerant / Amount charged at shipment	g	R22 / 1,150	
Refrigerant control		Capillary tube	
Operation sound	Indoor : Hi / Me / Lo dB-A	41 / 38 / 36	
	Outdoor : Hi dB-A	51	
Refrigerant tubing connections		Flare type	
Max. allowable tubing length at shipment	m	7.5	
Refrigerant tube diameter	Narrow tube mm (in.)	6.35(1/4)	
	Wide tube mm (in.)	12.7(1/2)	
Refrigerant tube kit / Accessories		Optional / Hanging wall bracket	
Dimensions & Weight		Indoor Unit	Outdoor Unit
Unit dimensions	Height	mm	285
	Width	mm	995
	Depth	mm	196
Package dimensions	Height	mm	276
	Width	mm	1,070
	Depth	mm	363
Weight	Net	kg	12.0
	Shipping	kg	15.0
Shipping volume	m ³	0.11	0.25

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **SAP-K241GJA** **SAP-K241GJA**
 Outdoor Unit **SAP-C241GA** **SAP-C241MA**

Power Source		220-240V Single phase 50Hz		
Voltage rating		220/230/240 V		
Performance		Cooling		
Capacity	kW	6.40	/	6.45 / 6.45
	BTU/h	21,800	/	22,000 / 22,000
Air circulation (High)		m ³ /h 830		
Moisture removal (High)		Liters/h 3.3		
Electrical Rating		Cooling		
Available voltage range	V	198 ~ 264		
Running amperes	A	12.8	/	12.8 / 12.8
Power input	W	2,650	/	2,680 / 2,760
Power factor	%	94	/	91 / 90
C.O.P.	W/W	2.4	/	2.4 / 2.3
Compressor locked rotor amperes	A	67	/	70 / 73
Features				
Controls / Temperature control		Microprocessor / I.C. thermostat		
Control unit		Wireless remote control unit		
Timer		1-hour OFF / 12-hours ON or OFF		
Fan speeds	Indoor / Outdoor	3 and Auto / Auto(Hi, Lo)		
Airflow direction (Indoor)	Horizontal	Manual		
	Vertical	Auto		
Air filter		Washable, Anti-Mold		
Compressor		Rotary (Hermetic)		
Refrigerant / Amount charged at shipment	g	R22 / 1,785		
Refrigerant control		Capillary tube		
Operation sound	Indoor : Hi / Me / Lo	dB-A 43 / 41 / 39		
	Outdoor : Hi	dB-A 54		
Refrigerant tubing connections		Flare type		
Max. allowable tubing length at shipment	m	10		
Refrigerant tube diameter	Narrow tube	mm (in.) 6.35(1/4)		
	Wide tube	mm (in.) 15.88(5/8)		
Refrigerant tube kit / Accessories		Optional / Hanging wall bracket		
Dimensions & Weight		Indoor Unit	Outdoor Unit	
Unit dimensions	Height	mm 285	630	
	Width	mm 995	810	
	Depth	mm 196	275	
Package dimensions	Height	mm 276	704	
	Width	mm 1,070	953	
	Depth	mm 363	369	
Weight	Net	kg 12.0	59.0	
	Shipping	kg 15.0	62.0	
Shipping volume	m ³	0.11	0.25	

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **SAP-K241GJA** **SAP-K241GJA**
 Outdoor Unit **SAP-C241JA** **SAP-C241BA**

Power Source		220V Single phase 60Hz	
Voltage rating		220 V	
Performance		Cooling	
Capacity	kW	6.40	
	BTU/h	21,800	
Air circulation (High)		m ³ /h	830
Moisture removal (High)		Liters/h	3.3
Electrical Rating		Cooling	
Available voltage range	V	198 ~ 242	
Running amperes	A	14.5	
Power input	W	2,890	
Power factor	%	91	
C.O.P.	W/W	2.2	
Compressor locked rotor amperes	A	89	
Features			
Controls / Temperature control		Microprocessor / I.C. thermostat	
Control unit		Wireless remote control unit	
Timer		1-hour OFF / 12-hours ON or OFF	
Fan speeds	Indoor / Outdoor	3 and Auto / Auto(Hi, Lo)	
Airflow direction (Indoor)	Horizontal	Manual	
	Vertical	Auto	
Air filter		Washable, Anti-Mold	
Compressor		Rotary (Hermetic)	
Refrigerant / Amount charged at shipment	g	R22 / 1,770	
Refrigerant control		Capillary tube	
Operation sound	Indoor : Hi / Me / Lo	dB-A	43 / 41 / 39
	Outdoor : Hi	dB-A	54
Refrigerant tubing connections		Flare type	
Max. allowable tubing length at shipment	m	10	
Refrigerant tube diameter	Narrow tube	mm (in.)	6.35(1/4)
	Wide tube	mm (in.)	15.88(5/8)
Refrigerant tube kit / Accessories		Optional / Hanging wall bracket	
Dimensions & Weight		Indoor Unit	Outdoor Unit
Unit dimensions	Height	mm	285
	Width	mm	995
	Depth	mm	196
Package dimensions	Height	mm	276
	Width	mm	1,070
	Depth	mm	363
Weight	Net	kg	12.0
	Shipping	kg	15.0
Shipping volume	m ³	0.11	0.25

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-2. Major Component Specifications

2-2-1. Indoor Unit

Indoor Unit **SAP-K161GJA**

Controller PCB		
Part No.		POW-K181GJA
Controls		Microprocessor
Control circuit fuse		250 V 3.15 A
Remote Control Unit		RCS-2S2E
Fan & Fan Motor		
Type		Cross-flow
Q'ty ... Dia. and length	mm	1 ... ø88 / L746
Fan motor model ... Q'ty		UF2-31A5P-S ... 1
No. of poles ... 50/60Hz rpm (High)		2 ... 1,440 / 1,410
Nominal output	W	30
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 133.7
		WHT-PNK : 168.4
		-- --
		-- --
Safety devices	Type	Internal protector
	Operating temp.	Open °C Close Automatic reclosing
Run capacitor	μF	2.0
	VAC	440
Flap Motor		
Type		Stepping motor
Model		MP24GA2
Rating		DC 12 V
Coil resistance (Ambient temp. 25°C)	Ω	Each terminals (1-2, 1-3, 1-4, 1-5) : 400 ± 7%
Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		2
Fin pitch	mm	1.3
Face area	m ²	0.156

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**

Controller PCB		
Part No.		POW-K181GJA
Controls		Microprocessor
Control circuit fuse		250 V 3.15 A
Remote Control Unit		RCS-2S2E
Fan & Fan Motor		
Type		Cross-flow
Q'ty ... Dia. and length	mm	1 ... ø88 / L746
Fan motor model ... Q'ty		UF2-31A5P-S ... 1
No. of poles ... 50/60Hz rpm (High)		2 ... 1,440 / 1,410
Nominal output	W	30
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 133.7
		WHT-PNK : 168.4
		-- --
		-- --
Safety devices	Type	Internal protector
	Operating temp.	Open °C Close Automatic reclosing
Run capacitor	μF	2.0
	VAC	440
Flap Motor		
Type		Stepping motor
Model		MP24GA2
Rating		DC 12 V
Coil resistance (Ambient temp. 25°C)	Ω	Each terminals (1-2, 1-3, 1-4, 1-5) : 400 ± 7%
Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		2
Fin pitch	mm	1.3
Face area	m ²	0.156

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**

Controller PCB		
Part No.		POW-K241GJA
Controls		Microprocessor
Control circuit fuse		250 V 3.15 A
Remote Control Unit		RCS-2S2E
Fan & Fan Motor		
Type		Cross-flow
Q'ty ... Dia. and length	mm	1 ... ø88 / L746
Fan motor model ... Q'ty		UF2-31A5P-S ... 1
No. of poles ... 50/60Hz rpm (High)		2 ... 1,440 / 1,410
Nominal output	W	30
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 133.7
		WHT-PNK : 168.4
		— —
		— —
Safety devices	Type	Internal protector
	Operating temp.	Open °C Close Automatic reclosing
Run capacitor	μF	2.0
	VAC	440
Flap Motor		
Type		Stepping motor
Model		MP24GA2
Rating		DC 12 V
Coil resistance (Ambient temp. 25°C)	Ω	Each terminals (1-2, 1-3, 1-4, 1-5) : 400 ± 7%
Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		2
Fin pitch	mm	1.3
Face area	m ²	0.156

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-2-2. Outdoor Unit

Outdoor Unit **SAP-C161GA**

Compressor			
Type	Rotary (Hermetic)		
Compressor model	C-R140H5W 80610045-S		
Nominal output	W	1,400	
Compressor oil ... Amount	cc	4GSD-T or SAY-56T ... 500	
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 1.560 C-S : 3.610	
Safety devices	Type	External(OLR A)	External(OLR T)
	Overload relay	MRA99150-9201	TS-120N
	Operating temp.	Open °C	145±5
		Close °C	69±11
	Operating amp.(Ambient temp. 25°C)	Trip in 6 to 16 sec. at 23.5A	
Run capacitor	μF	35.0	
	VAC	400	
Crank case heater	—		
Fan & Fan Motor			
Type	Propeller		
Q'ty ... Dia.	1 ... ø420		
Fan motor model ... Q'ty	KFG6S-51A5P-S ... 1		
No. of poles ... rpm (High)	6 ... 870		
Nominal output	W	50	
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 67.09 WHT-YEL : 68.12 YEL-PNK : 15.66	
Safety devices	Type	Internal protector	
	Operating temp.	Open °C	130±8
		Close °C	Automatic reclosing
Run capacitor	μF	4.0	
	VAC	440	
Heat Exch. Coil			
Coil	Aluminum plate fin / Copper tube		
Rows	1		
Fin pitch	mm	1.3	
Face area	m ²	0.506	
External Finish		Acrylic baked-on enamel finish	

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Outdoor Unit **SAP-C161JA**

Compressor			
Type	Rotary (Hermetic)		
Compressor model	C-R132H6D 80612346-S		
Nominal output	W	1,400	
Compressor oil ... Amount	cc	4GSD-T or SAY-56T ... 500	
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 1.442 C-S : 2.430	
Safety devices	Type	External(OLR A)	External(OLR T)
	Overload relay	MRA99828-9201	TS-120N
	Operating temp.	Open °C	145±5
		Close °C	69±11
	Operating amp.(Ambient temp. 25°C)	Trip in 6 to 16 sec. at 27A	
Run capacitor	μF	35.0	
	VAC	400	
Crank case heater	—		
Fan & Fan Motor			
Type	Propeller		
Q'ty ... Dia.	1 ... ø420		
Fan motor model ... Q'ty	KFG6S-51A6P-S ... 1		
No. of poles ... rpm (220 V, High)	6 ... 860		
Nominal output	W	50	
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 81.3 WHT-YEL : 60.86 YEL-PNK : 36.13	
Safety devices	Type	Internal protector	
	Operating temp.	Open °C	130±5
		Close °C	Automatic reclosing
Run capacitor	μF	3.0	
	VAC	440	
Heat Exch. Coil			
Coil	Aluminum plate fin / Copper tube		
Rows	1		
Fin pitch	mm	1.3	
Face area	m ²	0.506	
External Finish		Acrylic baked-on enamel finish	

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Outdoor Unit **SAP-C181GA** **SAP-C181MA**

Compressor		
Type		Rotary (Hermetic)
Compressor model		C-2R170H5T 80827445
Nominal output	W	1,700
Compressor oil ... Amount	cc	4GSD-T or SAY-56T ... 750
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 1.353 C-S : 3.422
Safety devices	Type	Internal protector
	Overload relay	—
	Operating temp. Open °C	Automatic opening
	Close °C	Automatic reclosing
	Operating amp.(Ambient temp. 25°C)	—
Run capacitor	μF	40.0
	VAC	400
Crank case heater		—

Fan & Fan Motor		
Type		Propeller
Q'ty ... Dia.		1 ... ø420
Fan motor model ... Q'ty		KFG6S-51A5P-S ... 1
No. of poles ... rpm (230 V, High)		6 ... 870
Nominal output	W	50
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 67.09 WHT-YEL : 68.12 YEL-PNK : 15.66
Safety devices	Type	Internal protector
	Operating temp. Open °C	130±8
	Close °C	Automatic reclosing
Run capacitor	μF	4.0
	VAC	440

Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		1
Fin pitch	mm	1.3
Face area	m ²	0.506

External Finish	Acrylic baked-on enamel finish
------------------------	--------------------------------

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Compressor				
Type				Rotary (Hermetic)
Compressor model				C-R132H6D 80612346-S
Nominal output	W			1,400
Compressor oil ... Amount	cc			4GSD-T or SAY-56T ... 500
Coil resistance (Ambient temp. 25°C)	Ω			C-R : 1.442 C-S : 2.430
Safety devices	Type			External(OLR A) External(OLR T)
	Overload relay			MRA99828-9201 TS-120N
	Operating temp.	Open	°C	145±5 120±5
		Close	°C	69±11 95±11
	Operating amp.(Ambient temp. 25°C)			Trip in 6 to 16 sec. at 27A —
Run capacitor	μF			35.0
	VAC			400
Crank case heater				—
Fan & Fan Motor				
Type				Propeller
Q'ty ... Dia.				1 ... ø420
Fan motor model ... Q'ty				KFG6S-51A6P-S ... 1
No. of poles ... rpm (220 V, High)				6 ... 860
Nominal output	W			50
Coil resistance (Ambient temp. 20°C)	Ω			WHT-BRN : 81.3 WHT-YEL : 60.86 YEL-PNK : 36.13
Safety devices	Type			Internal protector
	Operating temp.	Open	°C	130±5
		Close	°C	Automatic reclosing
Run capacitor	μF			3.0
	VAC			440
Heat Exch. Coil				
Coil				Aluminum plate fin / Copper tube
Rows				1
Fin pitch	mm			1.3
Face area	m ²			0.506
External Finish				Acrylic baked-on enamel finish

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Outdoor Unit **SAP-C241GA** **SAP-C241MA**

Compressor				
Type				Rotary (Hermetic)
Compressor model				C-R221H5S 80687145
Nominal output	W			2,200
Compressor oil ... Amount	cc			4GSD-T or SAY-56T ... 1,350
Coil resistance (Ambient temp. 25°C)	Ω			C-R : 0.777 C-S : 2.408
Safety devices	Type			Internal protector
	Overload relay			External(OLR T)
	Operating temp.	Open	°C	Automatic opening
		Close	°C	Automatic reclosing
Operating amp.(Ambient temp. 25°C)			—	
Run capacitor	μF			40.0
	VAC			400
Crank case heater				—
Fan & Fan Motor				
Type				Propeller
Q'ty ... Dia.				1 ... ø420
Fan motor model ... Q'ty				KFG6S-51D5P-S ... 1
No. of poles ... rpm (230 V, High)				6 ... 890
Nominal output	W			50
Coil resistance (Ambient temp. 20°C)	Ω			WHT-BRN : 56.09 WHT-YEL : 42.13 YEL-PNK : 15.99
Safety devices	Type			Internal protector
	Operating temp.	Open	°C	130±8
		Close	°C	Automatic reclosing
Run capacitor	μF			4.0
	VAC			440
Heat Exch. Coil				
Coil				Aluminum plate fin / Copper tube
Rows				2
Fin pitch	mm			1.2
Face area	m ²			0.499
External Finish				Acrylic baked-on enamel finish

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Compressor			
Type	Rotary (Hermetic)		
Compressor model	C-R191H6M 80649546		
Nominal output	W	1,900	
Compressor oil ... Amount	cc	4GSD-T or SAY-56T ... 1,350	
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 0.595 C-S : 2.693	
Safety devices	Type	Internal protector	External(OLR T)
	Overload relay	—	OL-D24
	Operating temp. Open °C	Automatic opening	150±5
	Close °C	Automatic reclosing	63±11
	Operating amp.(Ambient temp. 25°C)	—	Trip in 6 to 16 sec. at 59A
Run capacitor	μF	35.0	
	VAC	400	
Crank case heater	—		
Fan & Fan Motor			
Type	Propeller		
Q'ty ... Dia.	1 ... ø420		
Fan motor model ... Q'ty	KFG6S-51C6P-S ... 1		
No. of poles ... rpm (220 V, High)	6 ... 910		
Nominal output	W	50	
Coil resistance (Ambient temp. 20°C)	Ω	WHT-BRN : 85.16 WHT-YEL : 32.84 YEL-PNK : 51.57	
Safety devices	Type	Internal protector	
	Operating temp. Open °C	130±8	
	Close °C	Automatic reclosing	
Run capacitor	μF	3.5	
	VAC	440	
Heat Exch. Coil			
Coil	Aluminum plate fin / Copper tube		
Rows	2		
Fin pitch	mm	1.2	
Face area	m ²	0.499	
External Finish		Acrylic baked-on enamel finish	

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-3. Other Component Specifications

Indoor Unit **SAP-K161GJA**
 SAP-K181GJA **SAP-K181MBA**
 SAP-K241GJA **SAP-K241MBA**

Transformer (TR)		ATR-J105	
Rating	Primary	AC 230V, 50/60Hz	
	Secondary	19V, 0.526A	
	Capacity	10VA	
Coil resistance	Ω (at 21°C)	Primary (WHT – WHT):	205 \pm 10%
		Secondary (BRN – BRN):	2.0 \pm 10%
Thermal cut-off temp.		150°C	

Thermistor (Coil sensor)		DTN-TKS131B	
Resistance	k Ω	0°C	15.0 \pm 2%

Thermistor (Room sensor)		DTN-TKS142B	
Resistance	k Ω	25°C	5.0 \pm 3%






Outdoor Unit **SAP-C161GA** **SAP-C161JA**
 SAP-C181GA **SAP-C181JA** **SAP-C181MA** **SAP-C181BA**
 SAP-C241GA **SAP-C241JA** **SAP-C241MA** **SAP-C241BA**

Power Relay (PR)		G7L-2A-TUB	
Coil rating		AC 200–240V, 50/60Hz	
Coil resistance	Ω (at 23°C)	21 \pm 15%	
Contact rating		AC 220V, 25A	

Thermostat (Fan Speed Control 23S)		MQT5S	
Switching temp.	°C	high \rightarrow LOW	28.5°C \pm 1.5
		low \rightarrow HIGH	31.5°C \pm 2
Contact rating		AC 220V, 3A	


3. DIMENSIONAL DATA

Indoor Unit **SAP-K161GJA**
 SAP-K181GJA **SAP-K181MBA**
 SAP-K241GJA **SAP-K241MBA**

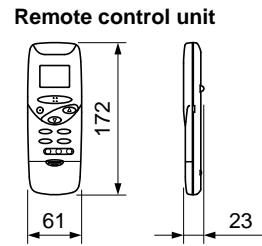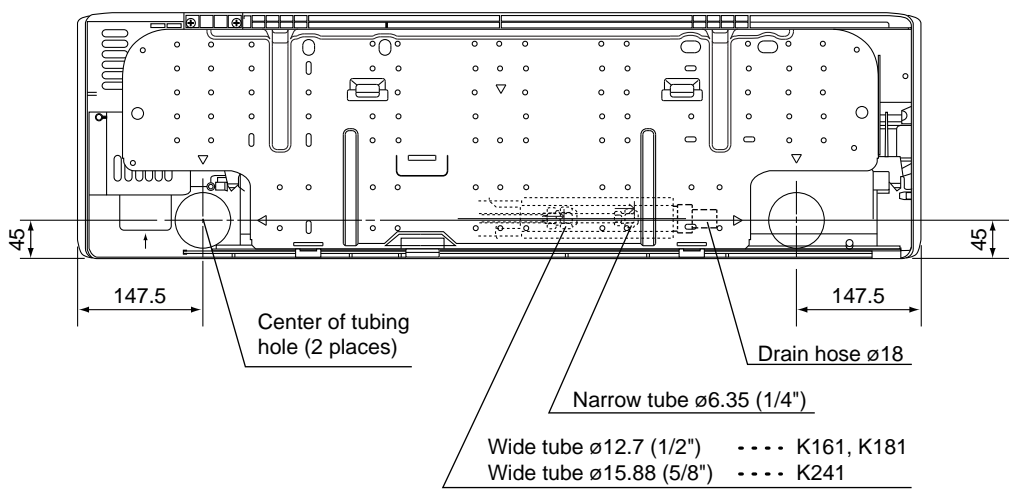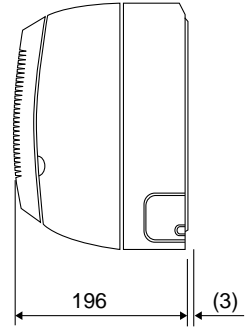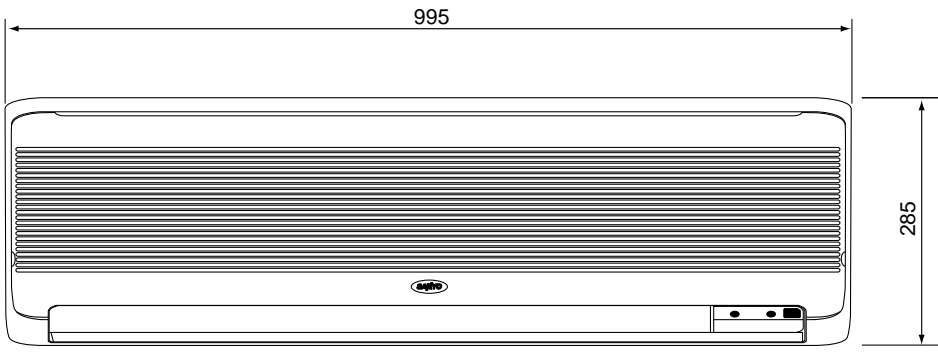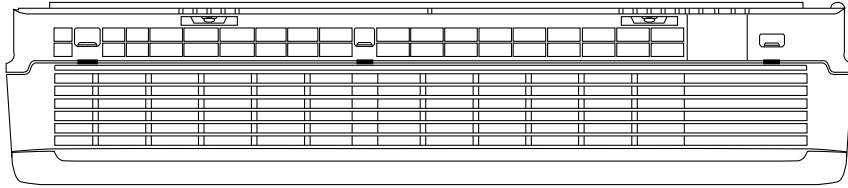



Unit : mm

Outdoor Unit **SAP-C161GA** **SAP-C161JA**
SAP-C181GA **SAP-C181JA** **SAP-C181MA** **SAP-C181BA**

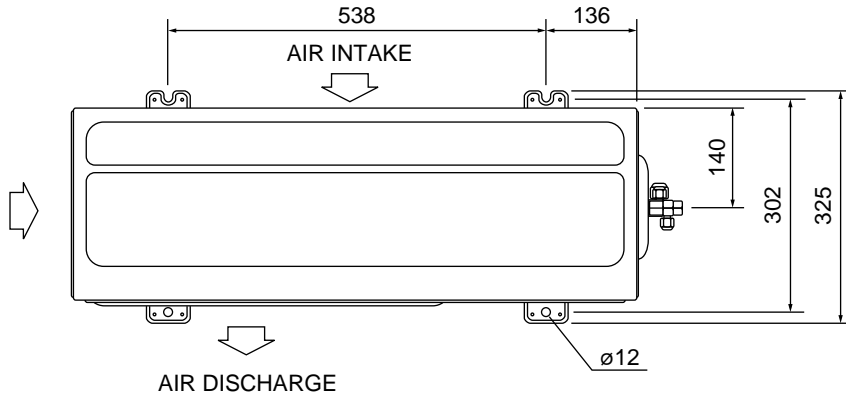


Wide tube service valve
 $\phi 12.7$ (1/2")

Narrow tube service valve
 $\phi 6.35$ (1/4")

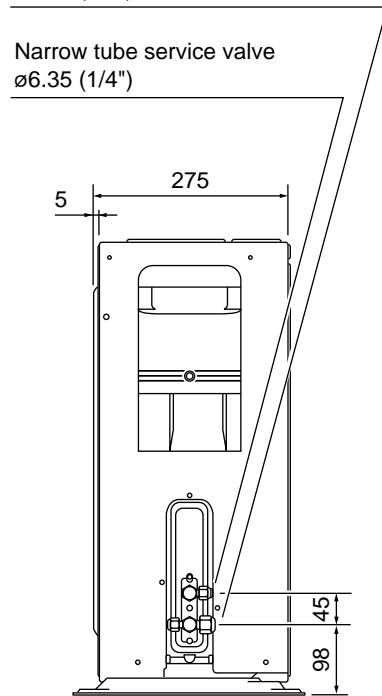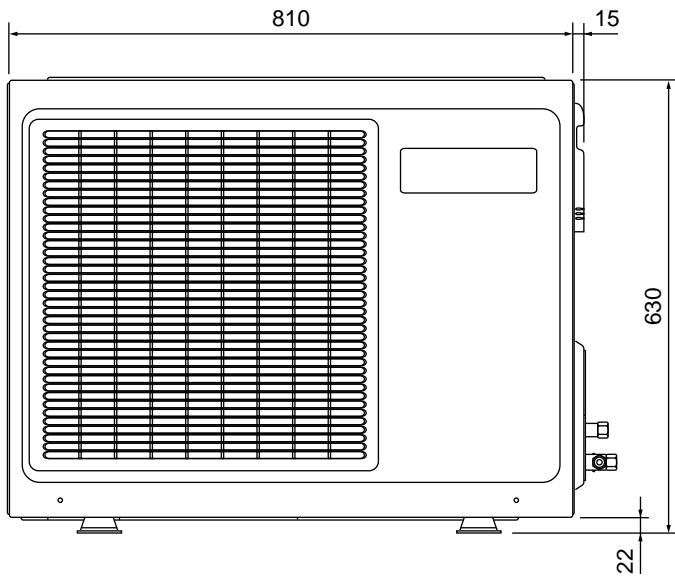



Unit : mm

Outdoor Unit **SAP-C241GA** **SAP-C241JA** **SAP-C241MA** **SAP-C241BA**

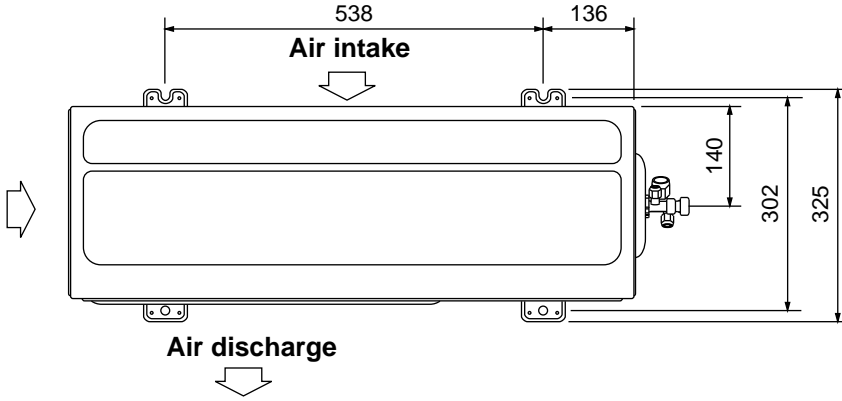

Wide tube service valve
 $\varnothing 15.88$ (5/8")

Narrow tube service valve
 $\varnothing 6.35$ (1/4")

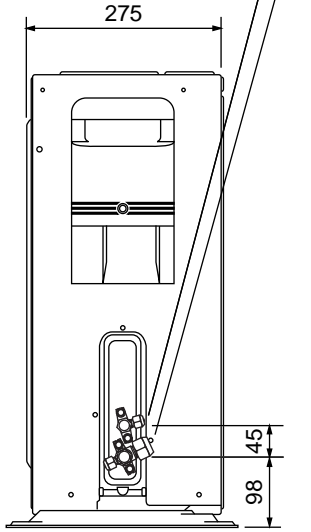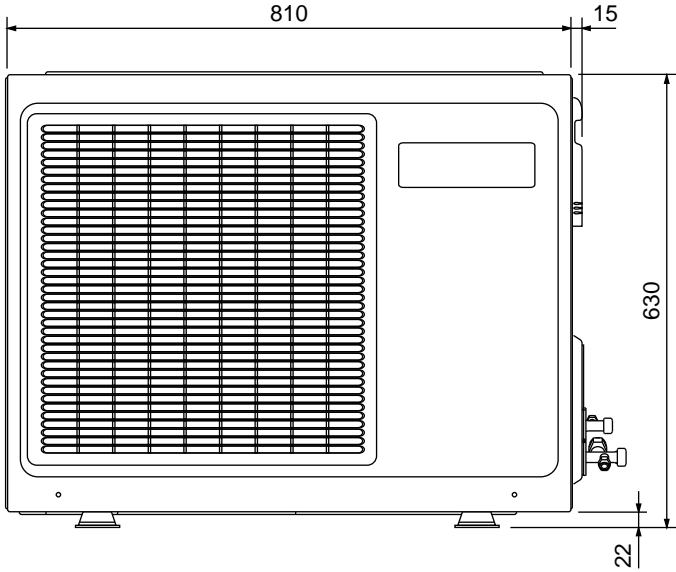


Unit : mm

4. REFRIGERANT FLOW DIAGRAM


Indoor Unit
SAP-K161GJA
SAP-K161GJA
SAP-K181GJA
SAP-K181MBA

Outdoor Unit
SAP-C161GA
SAP-C161JA
SAP-C181JA
SAP-C181BA

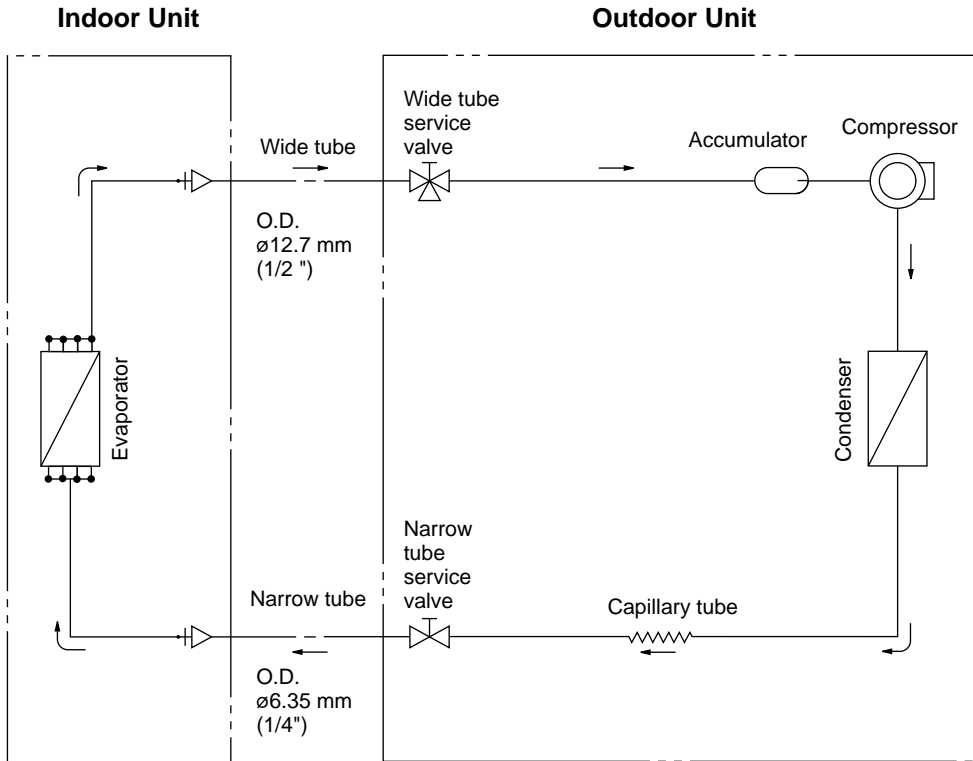


Indoor Unit
SAP-K181GJA
SAP-K181MBA

Outdoor Unit
SAP-C181GA
SAP-C181MA

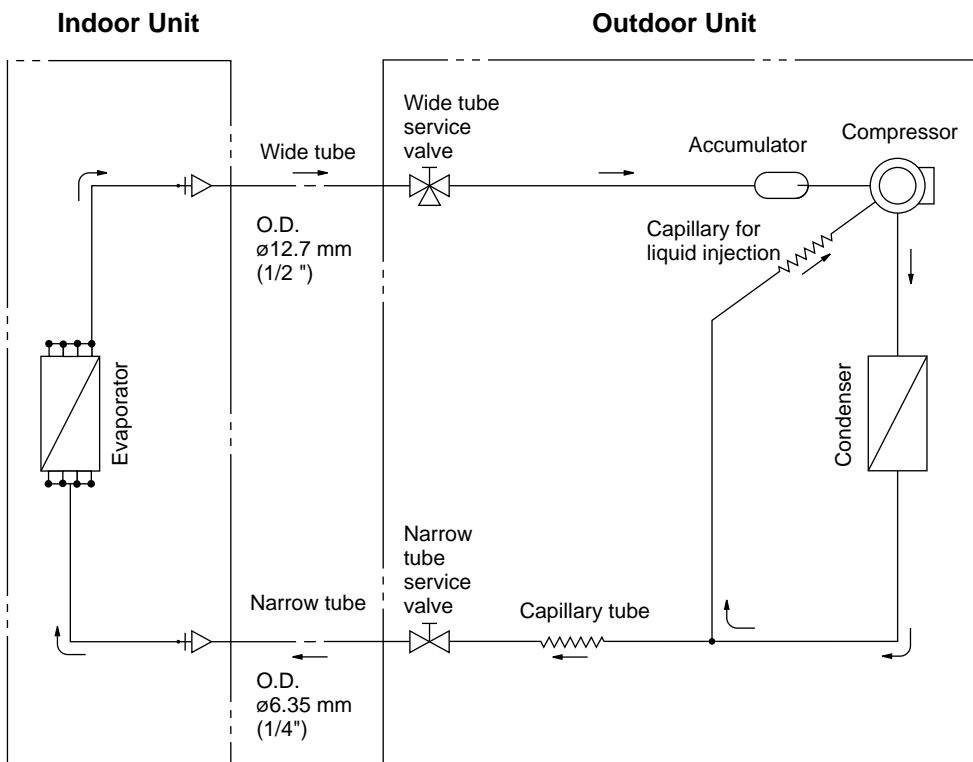

Indoor Unit
SAP-K241GJA
SAP-K241GJA
SAP-K241MBA
SAP-K241MBA


Outdoor Unit
SAP-C241GA
SAP-C241JA
SAP-C241MA
SAP-C241BA

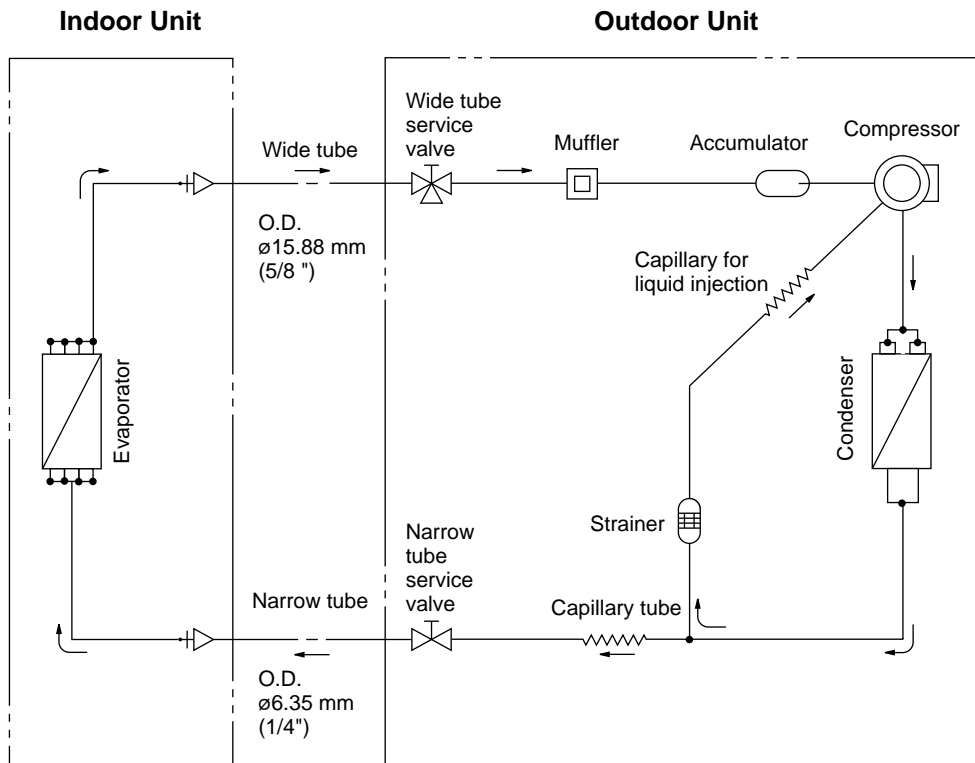

Insulation of Refrigerant Tubing

IMPORTANT

Because capillary tubing is used in the outdoor unit, both the wide and narrow tubes of this air conditioner become cold. To prevent heat loss and wet floors due to dripping of condensation, **both tubes must be well insulated** with a proper insulation material. The thickness of the insulation should be a min. 8 mm.

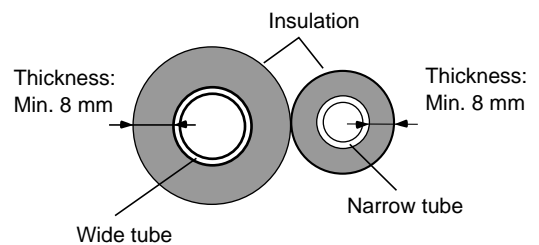

CAUTION

After a tube has been insulated, never try to bend it into a narrow curve because it can cause the tube to break or crack.


5. PERFORMANCE DATA

5-1. Performance charts




Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161GA**

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161JA**

■ Cooling Characteristics

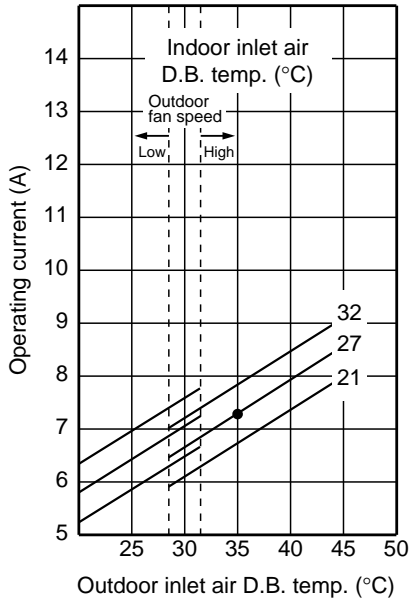

■ Cooling Characteristics

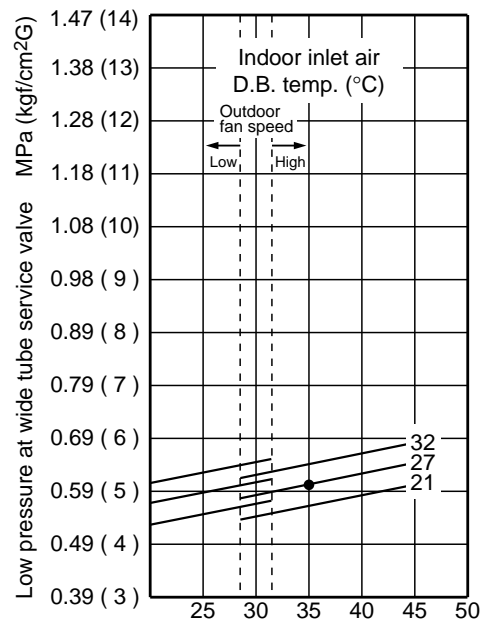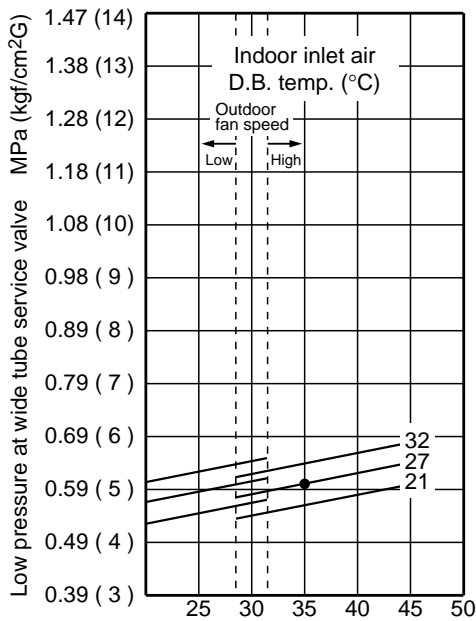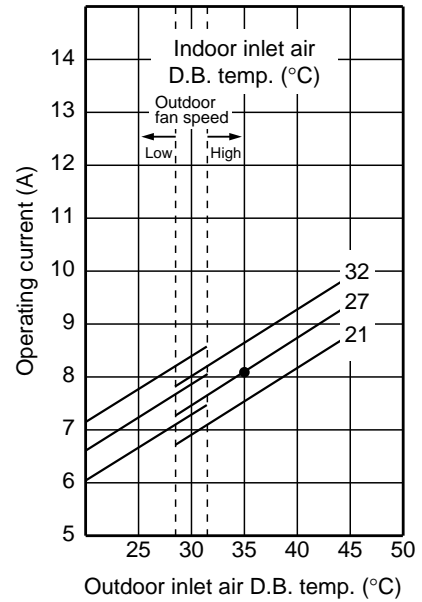

NOTE

- Points of Rating condition
 Black dots in above charts indicate the following rating conditions.


Cooling: Indoor air temperature 27°C D.B./19°C W.B.

Outdoor air temperature 35°C D.B./24°C W.B.




Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181GA** **SAP-C181MA**

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181JA** **SAP-K181BA**

■ Cooling Characteristics

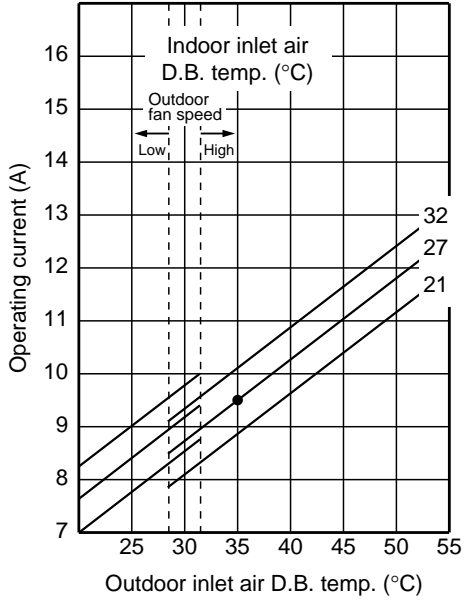

■ Cooling Characteristics

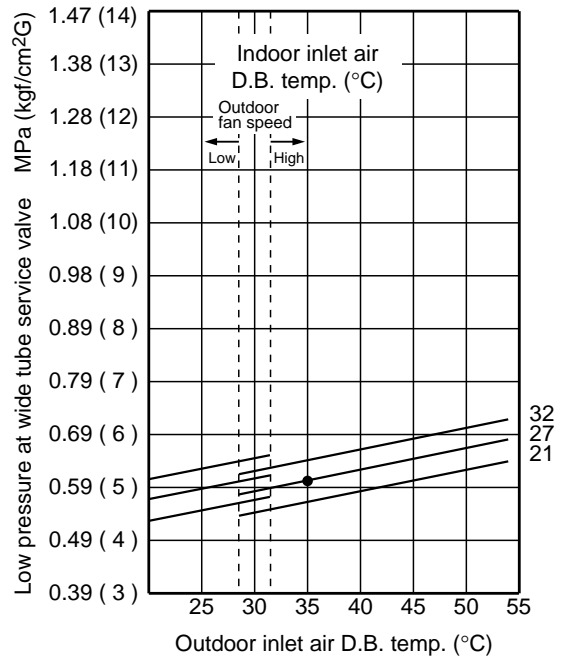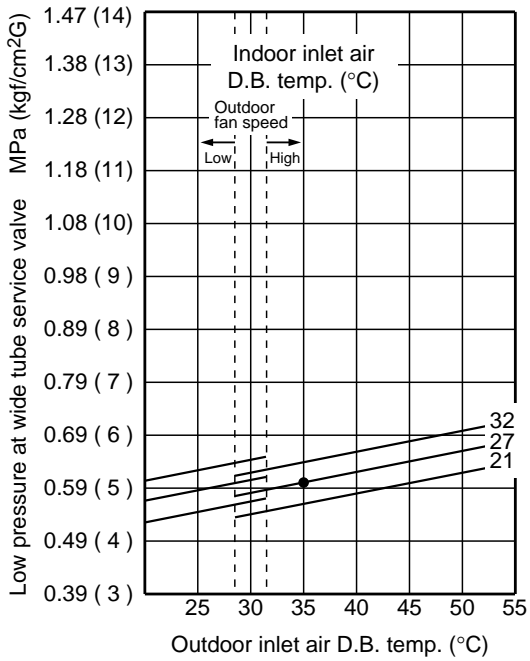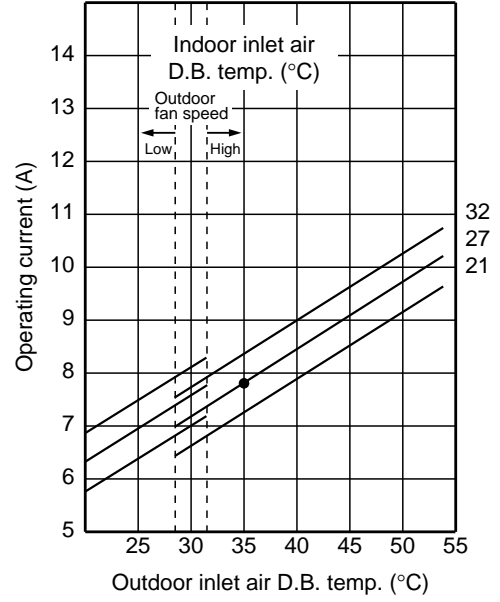

NOTE


● Points of Rating condition
 Black dots in above charts indicate the following rating conditions.

Cooling: Indoor air temperature 27°C D.B./19°C W.B.
 Outdoor air temperature 35°C D.B./24°C W.B.




Indoor Unit **SAP-K241GJA** **SAP-K241MBA**
 Outdoor Unit **SAP-C241GA** **SAP-C241MA**

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**
 Outdoor Unit **SAP-C241JA** **SAP-K241BA**

■ Cooling Characteristics

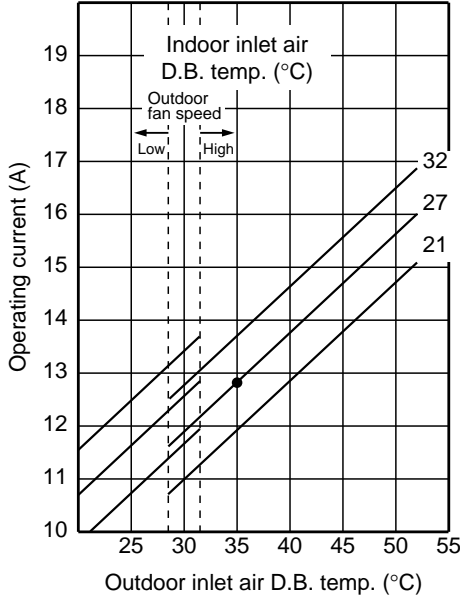

■ Cooling Characteristics

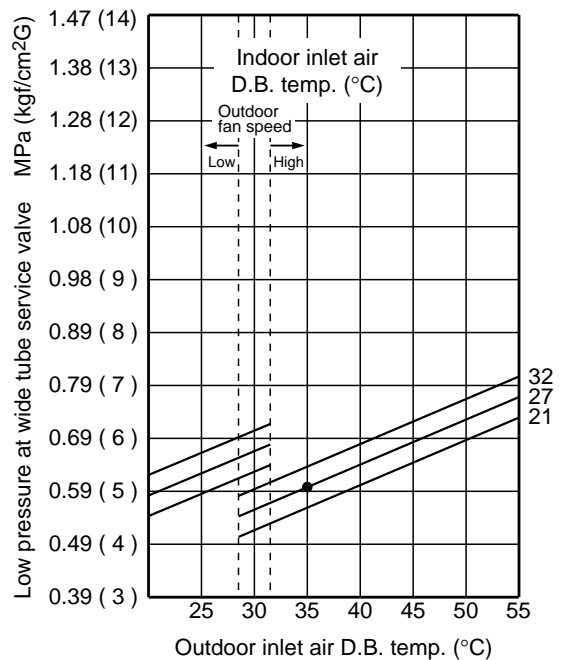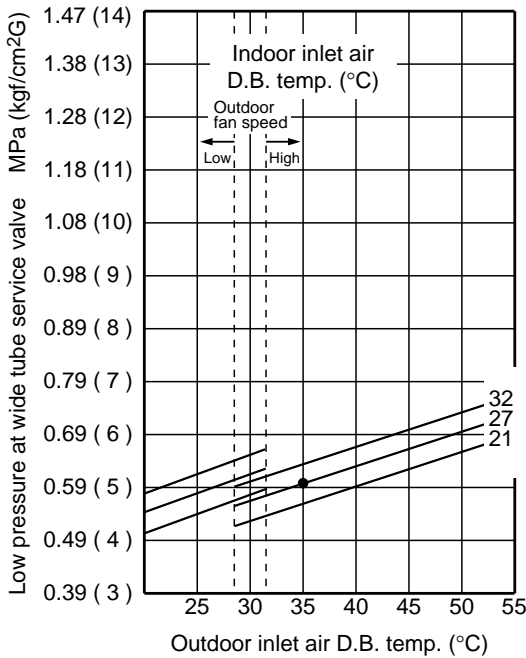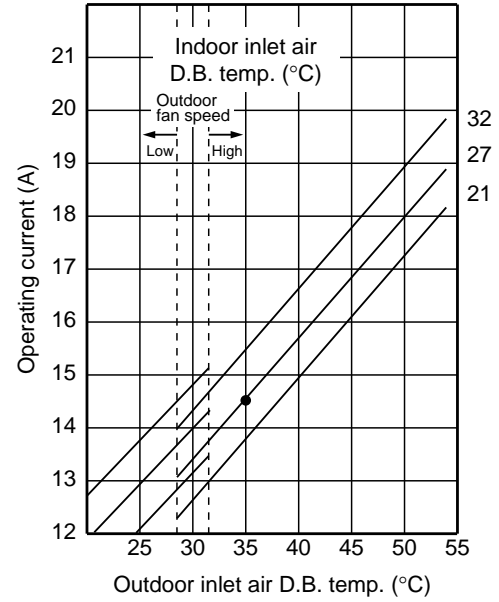

NOTE


- Points of Rating condition
 Black dots in above charts indicate the following rating conditions.

Cooling: Indoor air temperature 27°C D.B./19°C W.B.
 Outdoor air temperature 35°C D.B./24°C W.B.

5-2. Air Throw Distance Chart


Indoor Unit **SAP-K161GJA**
 SAP-K181GJA **SAP-K181MBA**

Room air temp. : **27°C**
 Fan speed : **High**

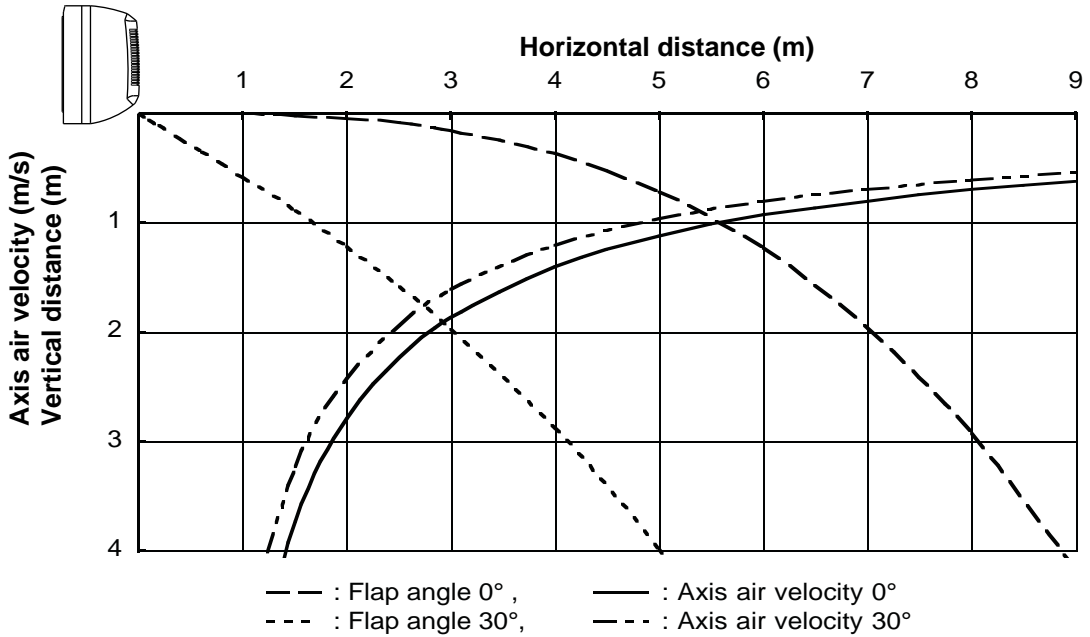

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**

Room air temp. : **27°C**
 Fan speed : **High**

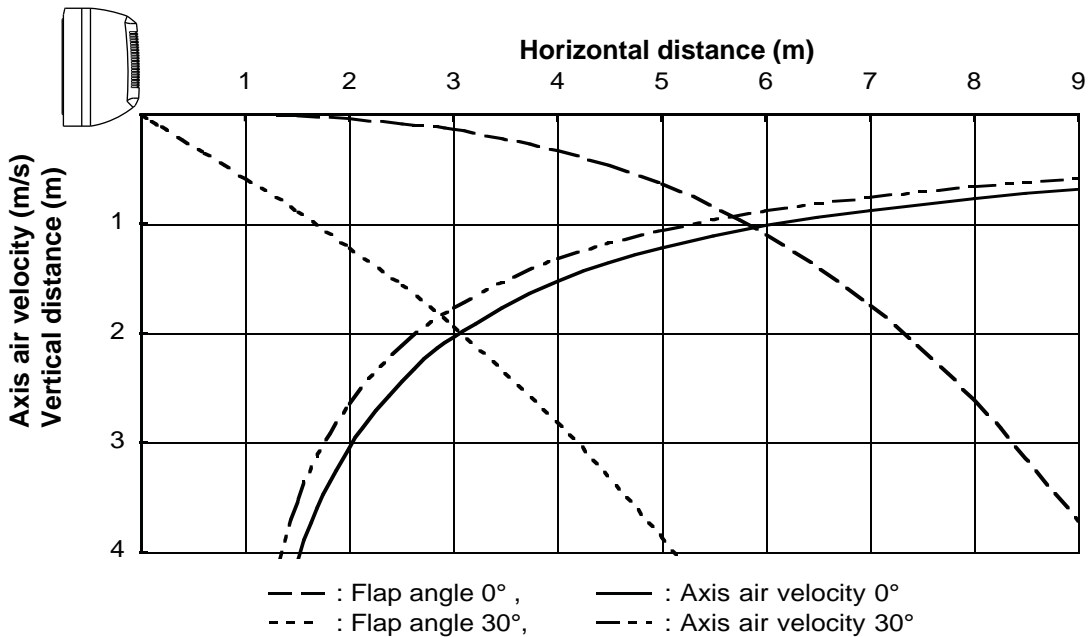

5-3. Cooling Capacity

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161GA**

240V Single Phase **50Hz**

RATING CAPACITY		4.70 kW				
AIR FLOW RATE		760 m³/h				
EVAPORATOR		CONDENSER				
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C				
W.B.	D.B.		30	35	40	43
15		TC	4.32	4.12	3.87	3.56
		CM	1.25	1.34	1.45	1.60
	21	SHC	2.92	2.81	2.68	2.53
	23	SHC	3.27	3.16	3.04	2.89
	25	SHC	3.63	3.52	3.39	3.24
	27	SHC	3.98	3.87	3.75	3.56
	29	SHC	4.32	4.12	3.87	3.56
	31	SHC	4.32	4.12	3.87	3.56
17		TC	4.64	4.42	4.15	3.82
		CM	1.28	1.38	1.49	1.64
	21	SHC	2.55	2.45	2.32	2.17
	23	SHC	2.91	2.80	2.67	2.52
	25	SHC	3.26	3.16	3.03	2.88
	27	SHC	3.62	3.51	3.38	3.23
	29	SHC	3.97	3.87	3.74	3.59
	31	SHC	4.33	4.22	4.09	3.82
19		TC	4.94	# 4.70	4.42	4.07
		CM	1.32	1.42	1.54	1.69
	21	SHC	2.17	2.06	1.94	1.79
	23	SHC	2.52	2.42	2.29	2.14
	25	SHC	2.88	2.77	2.65	2.50
	27	SHC	3.23	3.13	3.00	2.85
	29	SHC	3.59	3.48	3.36	3.21
	31	SHC	3.94	3.84	3.71	3.56
21		TC	5.23	4.98	4.68	4.31
		CM	1.36	1.46	1.58	1.73
	23	SHC	2.13	2.03	1.91	1.76
	25	SHC	2.49	2.38	2.26	2.11
	27	SHC	2.84	2.74	2.62	2.47
	29	SHC	3.20	3.09	2.97	2.82
23		TC	5.54	5.23	4.90	4.55
		CM	1.39	1.50	1.62	1.78
	25	SHC	2.07	1.95	1.83	1.70
	27	SHC	2.43	2.31	2.18	2.06
	29	SHC	2.78	2.66	2.54	2.41
	31	SHC	3.14	3.02	2.89	2.77

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161JA**

220V Single Phase **60Hz**

RATING CAPACITY		4.70 kW				
AIR FLOW RATE		760 m ³ /h				
EVAPORATOR		CONDENSER				
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C				
W.B.	D.B.		30	35	40	43
15		TC	4.32	4.12	3.87	3.56
		CM	1.38	1.48	1.60	1.75
	21	SHC	2.91	2.81	2.68	2.53
	23	SHC	3.27	3.16	3.03	2.88
	25	SHC	3.62	3.52	3.39	3.24
	27	SHC	3.98	3.87	3.74	3.56
	29	SHC	4.32	4.12	3.87	3.56
17		TC	4.64	4.42	4.15	3.82
		CM	1.42	1.52	1.65	1.79
	21	SHC	2.55	2.44	2.32	2.16
	23	SHC	2.90	2.80	2.67	2.52
	25	SHC	3.26	3.15	3.03	2.87
	27	SHC	3.61	3.51	3.38	3.23
	29	SHC	3.97	3.86	3.74	3.58
19		TC	4.94	# 4.70	4.42	4.07
		CM	1.47	1.57	1.70	1.84
	21	SHC	2.17	2.06	1.93	1.78
	23	SHC	2.52	2.41	2.29	2.14
	25	SHC	2.88	2.77	2.64	2.49
	27	SHC	3.23	3.12	3.00	2.85
	29	SHC	3.58	3.48	3.35	3.20
21		TC	5.23	4.98	4.68	4.31
		CM	1.51	1.62	1.74	1.89
	23	SHC	2.13	2.03	1.90	1.75
	25	SHC	2.48	2.38	2.26	2.11
	27	SHC	2.84	2.74	2.61	2.46
	29	SHC	3.19	3.09	2.97	2.82
23		TC	5.54	5.23	4.90	4.55
		CM	1.55	1.66	1.79	1.94
	25	SHC	2.07	1.95	1.82	1.70
	27	SHC	2.42	2.30	2.18	2.05
	29	SHC	2.78	2.66	2.53	2.41
		SHC	3.13	3.01	2.89	2.76

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181GA** **SAP-C181MA**

240V Single Phase **50Hz**

RATING CAPACITY		5.15 kW					
AIR FLOW RATE		760 m ³ /h					
EVAPORATOR		CONDENSER					
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C					
W.B.	D.B.		30	35	40	45	50
15		TC	4.74	4.51	4.24	3.90	3.52
		CM	1.69	1.81	2.07	2.33	2.59
	21	SHC	3.14	3.02	2.87	2.70	2.51
	23	SHC	3.49	3.37	3.23	3.06	2.86
	25	SHC	3.85	3.73	3.58	3.41	3.22
	27	SHC	4.20	4.08	3.94	3.77	3.52
	29	SHC	4.56	4.44	4.24	3.90	3.52
	31	SHC	4.74	4.51	4.24	3.90	3.52
17		TC	5.08	4.84	4.55	4.19	3.78
		CM	1.73	1.86	2.12	2.38	2.64
	21	SHC	2.77	2.65	2.51	2.34	2.15
	23	SHC	3.13	3.01	2.86	2.69	2.50
	25	SHC	3.48	3.36	3.22	3.05	2.86
	27	SHC	3.84	3.72	3.57	3.40	3.21
	29	SHC	4.19	4.07	3.93	3.76	3.56
	31	SHC	4.55	4.43	4.28	4.11	3.78
19		TC	5.41	# 5.15	4.84	4.45	4.02
		CM	1.79	1.92	2.18	2.45	2.71
	21	SHC	2.39	2.27	2.13	1.95	1.77
	23	SHC	2.74	2.62	2.48	2.31	2.12
	25	SHC	3.10	2.98	2.84	2.66	2.47
	27	SHC	3.45	3.33	3.19	3.02	2.83
	29	SHC	3.81	3.69	3.55	3.37	3.18
	31	SHC	4.16	4.04	3.90	3.73	3.54
21		TC	5.73	5.46	5.13	4.72	4.26
		CM	1.84	1.97	2.24	2.51	2.78
	23	SHC	2.35	2.23	2.09	1.92	1.74
	25	SHC	2.71	2.59	2.45	2.28	2.09
	27	SHC	3.06	2.94	2.80	2.63	2.45
	29	SHC	3.41	3.30	3.16	2.99	2.80
23		TC	6.07	5.73	5.37	4.99	4.52
		CM	1.89	2.02	2.30	2.57	2.84
	25	SHC	2.28	2.15	2.01	1.86	1.69
	27	SHC	2.64	2.50	2.36	2.22	2.04
	29	SHC	2.99	2.86	2.71	2.57	2.40
	31	SHC	3.35	3.21	3.07	2.93	2.75

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181JA** **SAP-C181BA**

220V Single Phase **60Hz**

RATING CAPACITY		5.15 kW					
AIR FLOW RATE		760 m ³ /h					
EVAPORATOR		CONDENSER					
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C					
W.B.	D.B.		30	35	40	45	50
15		TC	4.74	4.51	4.24	3.90	3.52
		CM	1.32	1.42	1.60	1.78	1.96
	21	SHC	3.13	3.01	2.87	2.70	2.51
	23	SHC	3.49	3.37	3.22	3.05	2.86
	25	SHC	3.84	3.72	3.58	3.41	3.22
	27	SHC	4.20	4.08	3.93	3.76	3.52
	29	SHC	4.55	4.43	4.24	3.90	3.52
	31	SHC	4.74	4.51	4.24	3.90	3.52
17		TC	5.08	4.84	4.55	4.19	3.78
		CM	1.36	1.46	1.64	1.83	2.01
	21	SHC	2.77	2.65	2.51	2.33	2.14
	23	SHC	3.13	3.00	2.86	2.69	2.50
	25	SHC	3.48	3.36	3.22	3.04	2.85
	27	SHC	3.84	3.71	3.57	3.40	3.21
	29	SHC	4.19	4.07	3.93	3.75	3.56
	31	SHC	4.55	4.42	4.28	4.11	3.78
19		TC	5.41	# 5.15	4.84	4.45	4.02
		CM	1.40	1.50	1.69	1.88	2.06
	21	SHC	2.39	2.26	2.12	1.95	1.76
	23	SHC	2.74	2.62	2.48	2.31	2.12
	25	SHC	3.10	2.97	2.83	2.66	2.47
	27	SHC	3.45	3.33	3.19	3.01	2.83
	29	SHC	3.81	3.68	3.54	3.37	3.18
	31	SHC	4.16	4.04	3.90	3.72	3.54
21		TC	5.73	5.46	5.13	4.72	4.26
		CM	1.44	1.54	1.73	1.92	2.11
	23	SHC	2.35	2.23	2.09	1.92	1.73
	25	SHC	2.70	2.58	2.44	2.27	2.09
	27	SHC	3.06	2.94	2.80	2.63	2.44
	29	SHC	3.41	3.29	3.15	2.98	2.80
23		TC	6.07	5.73	5.37	4.99	4.52
		CM	1.48	1.58	1.78	1.97	2.16
	25	SHC	2.28	2.14	2.00	1.86	1.69
	27	SHC	2.64	2.50	2.36	2.21	2.04
	29	SHC	2.99	2.85	2.71	2.57	2.40
	31	SHC	3.35	3.21	3.07	2.92	2.75

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**
 Outdoor Unit **SAP-C241GA** **SAP-C241MA**

240V Single Phase **50Hz**

RATING CAPACITY		6.45 kW					
AIR FLOW RATE		830 m ³ /h					
EVAPORATOR		CONDENSER					
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C					
W.B.	D.B.		30	35	40	45	50
15		TC	5.93	5.65	5.31	4.89	4.40
		CM	2.25	2.42	2.68	2.95	3.21
	21	SHC	3.84	3.68	3.49	3.26	3.01
	23	SHC	4.22	4.06	3.87	3.64	3.39
	25	SHC	4.60	4.44	4.25	4.02	3.77
	27	SHC	4.98	4.82	4.63	4.40	4.15
	29	SHC	5.36	5.20	5.01	4.78	4.40
	31	SHC	5.75	5.58	5.31	4.89	4.40
17		TC	6.37	6.06	5.70	5.24	4.73
		CM	2.32	2.49	2.75	3.02	3.28
	21	SHC	3.46	3.29	3.10	2.87	2.62
	23	SHC	3.84	3.67	3.48	3.25	3.00
	25	SHC	4.22	4.06	3.86	3.63	3.38
	27	SHC	4.60	4.44	4.24	4.01	3.76
	29	SHC	4.98	4.82	4.62	4.39	4.14
	31	SHC	5.36	5.20	5.00	4.77	4.52
19		TC	6.77	# 6.45	6.06	5.58	5.03
		CM	2.39	2.56	2.83	3.10	3.37
	21	SHC	3.04	2.88	2.69	2.46	2.21
	23	SHC	3.42	3.26	3.07	2.84	2.59
	25	SHC	3.80	3.64	3.45	3.22	2.97
	27	SHC	4.18	4.02	3.83	3.60	3.35
	29	SHC	4.56	4.40	4.21	3.98	3.73
	31	SHC	4.94	4.78	4.59	4.36	4.11
21		TC	7.18	6.84	6.43	5.91	5.33
		CM	2.45	2.63	2.91	3.18	3.46
	23	SHC	3.00	2.83	2.64	2.42	2.17
	25	SHC	3.38	3.21	3.02	2.80	2.55
	27	SHC	3.76	3.59	3.41	3.18	2.93
	29	SHC	4.14	3.97	3.79	3.56	3.31
	31	SHC	4.52	4.35	4.17	3.94	3.69
23		TC	7.60	7.18	6.72	6.25	5.66
		CM	2.52	2.70	2.98	3.26	3.54
	25	SHC	2.91	2.73	2.54	2.34	2.11
	27	SHC	3.29	3.11	2.92	2.72	2.49
	29	SHC	3.67	3.49	3.30	3.10	2.87
	31	SHC	4.06	3.87	3.68	3.48	3.25

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**
 Outdoor Unit **SAP-C241JA** **SAP-C241BA**

220V Single Phase **60Hz**

RATING CAPACITY		6.40 kW					
AIR FLOW RATE		830 m ³ /h					
EVAPORATOR		CONDENSER					
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C					
W.B.	D.B.		30	35	40	45	50
15		TC	5.89	5.61	5.27	4.85	4.37
		CM	2.35	2.52	2.85	3.19	3.51
	21	SHC	3.81	3.65	3.46	3.24	2.99
	23	SHC	4.19	4.03	3.84	3.62	3.37
	25	SHC	4.57	4.41	4.22	4.00	3.75
	27	SHC	4.96	4.79	4.60	4.38	4.13
	29	SHC	5.34	5.17	4.98	4.76	4.37
	31	SHC	5.72	5.55	5.27	4.85	4.37
17		TC	6.32	6.02	5.66	5.20	4.69
		CM	2.42	2.59	2.93	3.26	3.59
	21	SHC	3.43	3.27	3.08	2.85	2.60
	23	SHC	3.81	3.65	3.46	3.23	2.98
	25	SHC	4.19	4.03	3.84	3.61	3.36
	27	SHC	4.57	4.41	4.22	3.99	3.74
	29	SHC	4.95	4.79	4.60	4.37	4.12
	31	SHC	5.33	5.17	4.98	4.75	4.50
19		TC	6.72	# 6.40	6.02	5.54	4.99
		CM	2.49	2.67	3.01	3.35	3.69
	21	SHC	3.01	2.85	2.66	2.43	2.19
	23	SHC	3.39	3.23	3.04	2.81	2.57
	25	SHC	3.77	3.61	3.42	3.19	2.95
	27	SHC	4.15	3.99	3.80	3.57	3.33
	29	SHC	4.53	4.37	4.18	3.95	3.71
	31	SHC	4.91	4.75	4.56	4.34	4.09
21		TC	7.12	6.78	6.38	5.87	5.29
		CM	2.56	2.75	3.09	3.43	3.78
	23	SHC	2.97	2.81	2.62	2.39	2.15
	25	SHC	3.35	3.19	3.00	2.77	2.53
	27	SHC	3.73	3.57	3.38	3.15	2.91
	29	SHC	4.11	3.95	3.76	3.54	3.29
23		TC	7.55	7.12	6.67	6.20	5.62
		CM	2.63	2.82	3.17	3.51	3.86
	25	SHC	2.88	2.70	2.51	2.32	2.09
	27	SHC	3.27	3.08	2.89	2.70	2.47
	29	SHC	3.65	3.46	3.27	3.08	2.85
	31	SHC	4.03	3.84	3.65	3.46	3.23

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

6. ELECTRICAL DATA

6-1. Electrical Characteristics

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161GA**

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.37 / 0.38	0.48 / 0.50	6.35 / 6.42	7.2 / 7.3	
	Power Input kW	0.070 / 0.073	0.105 / 0.119	1.365 / 1.418	1.54 / 1.61	
Full Load Conditions	Running Amps. A	0.37 / 0.38	0.48 / 0.50	8.05 / 7.82	8.9 / 8.7	
	Power Input kW	0.070 / 0.073	0.105 / 0.119	1.735 / 1.778	1.91 / 1.97	

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.

Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.
 Outdoor Air Temperature 43°C D.B.

Indoor Unit **SAP-K161GJA**
 Outdoor Unit **SAP-C161JA**

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220V ~ 60Hz				
Rating Conditions	Running Amps. A	0.40	0.54	7.17	8.1	
	Power Input kW	0.079	0.119	1.572	1.77	
Full Load Conditions	Running Amps. A	0.40	0.54	8.87	9.8	
	Power Input kW	0.079	0.119	1.942	2.14	

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.

Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.
 Outdoor Air Temperature 43°C D.B.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181GA** **SAP-C181MA**

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.37 / 0.38	0.48 / 0.50	8.75 / 8.62	9.6 / 9.5	
	Power Input kW	0.070 / 0.073	0.105 / 0.119	1.855 / 1.918	2.03 / 2.11	
Full Load Conditions	Running Amps. A	0.37 / 0.38	0.48 / 0.50	13.05 / 12.52	13.9 / 13.4	
	Power Input kW	0.070 / 0.073	0.105 / 0.119	2.785 / 2.838	2.96 / 3.03	

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.
 Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.
 Outdoor Air Temperature 52°C D.B.

Indoor Unit **SAP-K181GJA** **SAP-K181MBA**
 Outdoor Unit **SAP-C181JA** **SAP-C181BA**

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220V ~ 60Hz				
Rating Conditions	Running Amps. A	0.40	0.54	6.87	7.8	
	Power Input kW	0.079	0.119	1.502	1.70	
SSA 385, 386 Conditions	Running Amps.	0.40	0.54	8.17	9.1	
	Power Input	0.079	0.119	1.792	1.99	
Full Load Conditions	Running Amps. A	0.40	0.54	9.87	10.8	
	Power Input kW	0.079	0.119	2.162	2.36	

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.
 SSA 385, 386 Conditions (Saudi standard)
 : Indoor Air Temperature 29°C D.B. / 19°C W.B.
 Outdoor Air Temperature 46°C D.B. / 24°C W.B.
 Full Load Conditions : Indoor Air Temperature 29°C D.B. / 19°C W.B.
 Outdoor Air Temperature 54°C D.B.

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**
 Outdoor Unit **SAP-C241GA** **SAP-C241MA**

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.39 / 0.40		0.49 / 0.50	11.92 / 11.90	12.8 / 12.8
	Power Input kW	0.075 / 0.080		0.106 / 0.118	2.469 / 2.562	2.65 / 2.76
Full Load Conditions	Running Amps. A	0.39 / 0.40		0.49 / 0.50	16.62 / 15.90	17.5 / 16.8
	Power Input kW	0.075 / 0.080		0.106 / 0.118	3.509 / 3.542	3.69 / 3.74

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.

Outdoor Air Temperature 35°C D.B.

Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.

Outdoor Air Temperature 52°C D.B.

Indoor Unit **SAP-K241GJA** **SAP-K241MBA**
 Outdoor Unit **SAP-C241JA** **SAP-C241BA**

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220V ~ 60Hz				
Rating Conditions	Running Amps. A	0.42		0.60	13.48	14.5
	Power Input kW	0.086		0.131	2.673	2.89
SSA 385, 386 Conditions	Running Amps. A	0.42		0.60	15.78	16.8
	Power Input kW	0.086		0.131	3.173	3.39
Full Load Conditions	Running Amps. A	0.42		0.60	18.98	20.0
	Power Input kW	0.086		0.131	3.863	4.08

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.

Outdoor Air Temperature 35°C D.B.

SSA 385, 386 Conditions (Saudi standard)

: Indoor Air Temperature 29°C D.B. / 19°C W.B.

Outdoor Air Temperature 46°C D.B. / 24°C W.B.

Full Load Conditions : Indoor Air Temperature 29°C D.B. / 19°C W.B.

Outdoor Air Temperature 54°C D.B.

6-2. Electric Wiring Diagrams


Indoor Unit

SAP-K161GJA
SAP-K181GJA
SAP-K241GJA



WARNING

To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

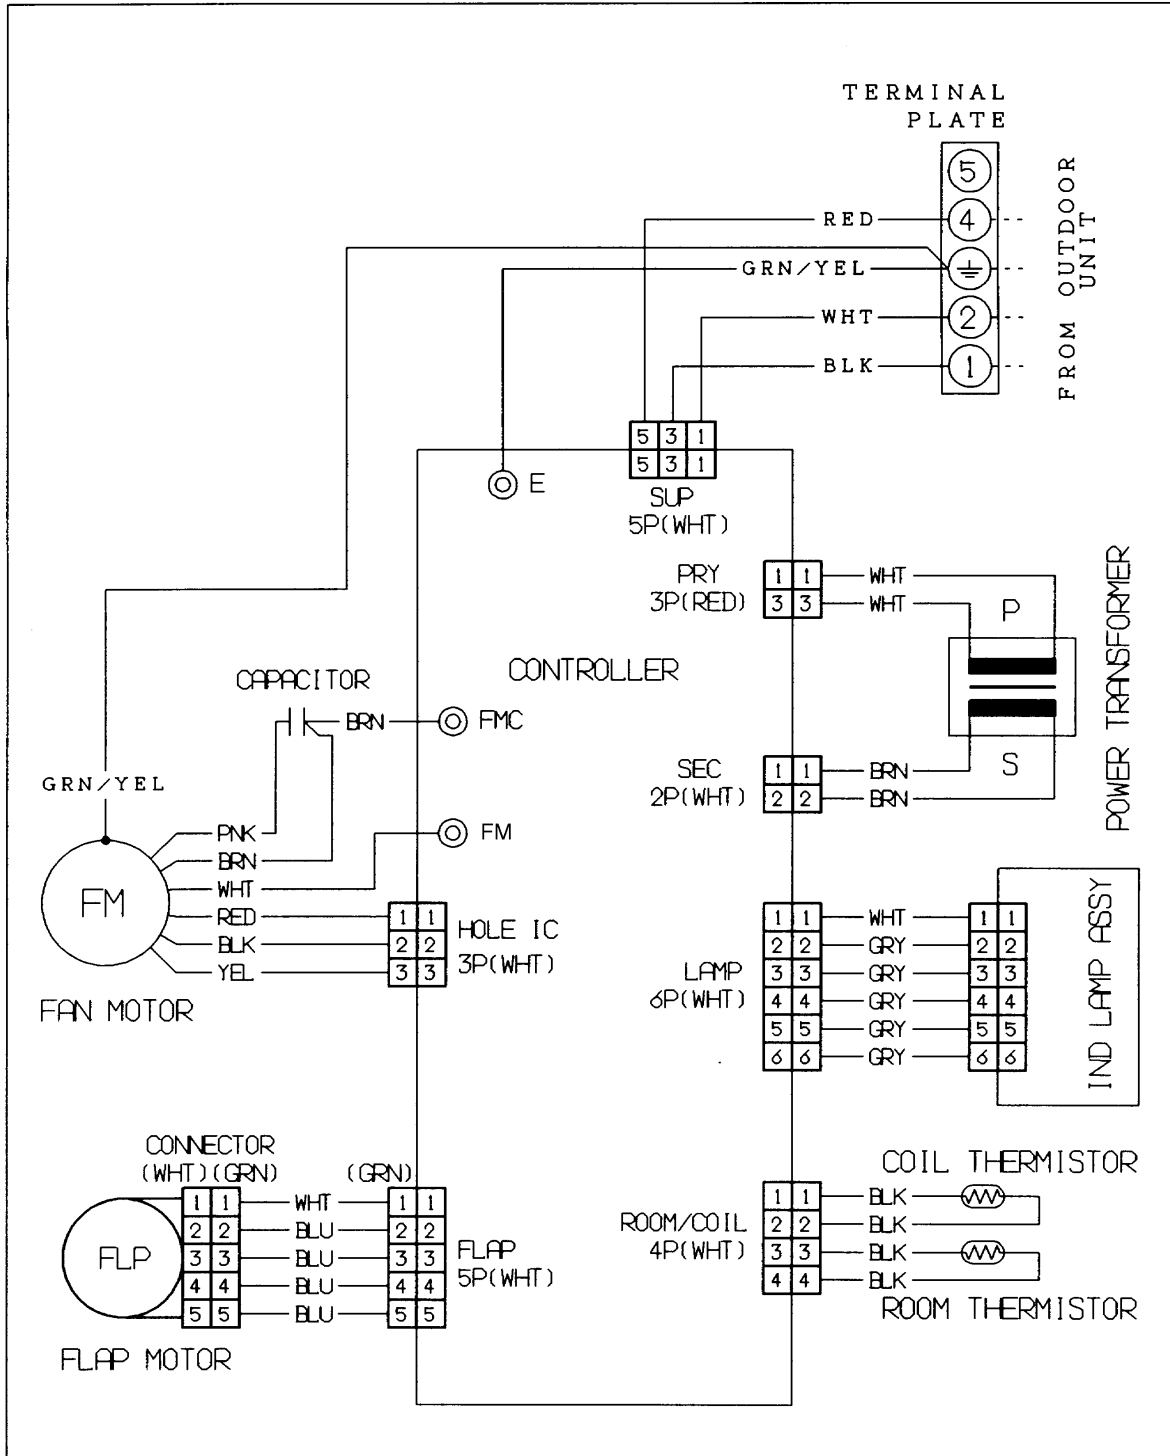

8512-5253-500xx-2


Indoor Unit

SAP-K181MBA
SAP-K241MBA



WARNING

To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

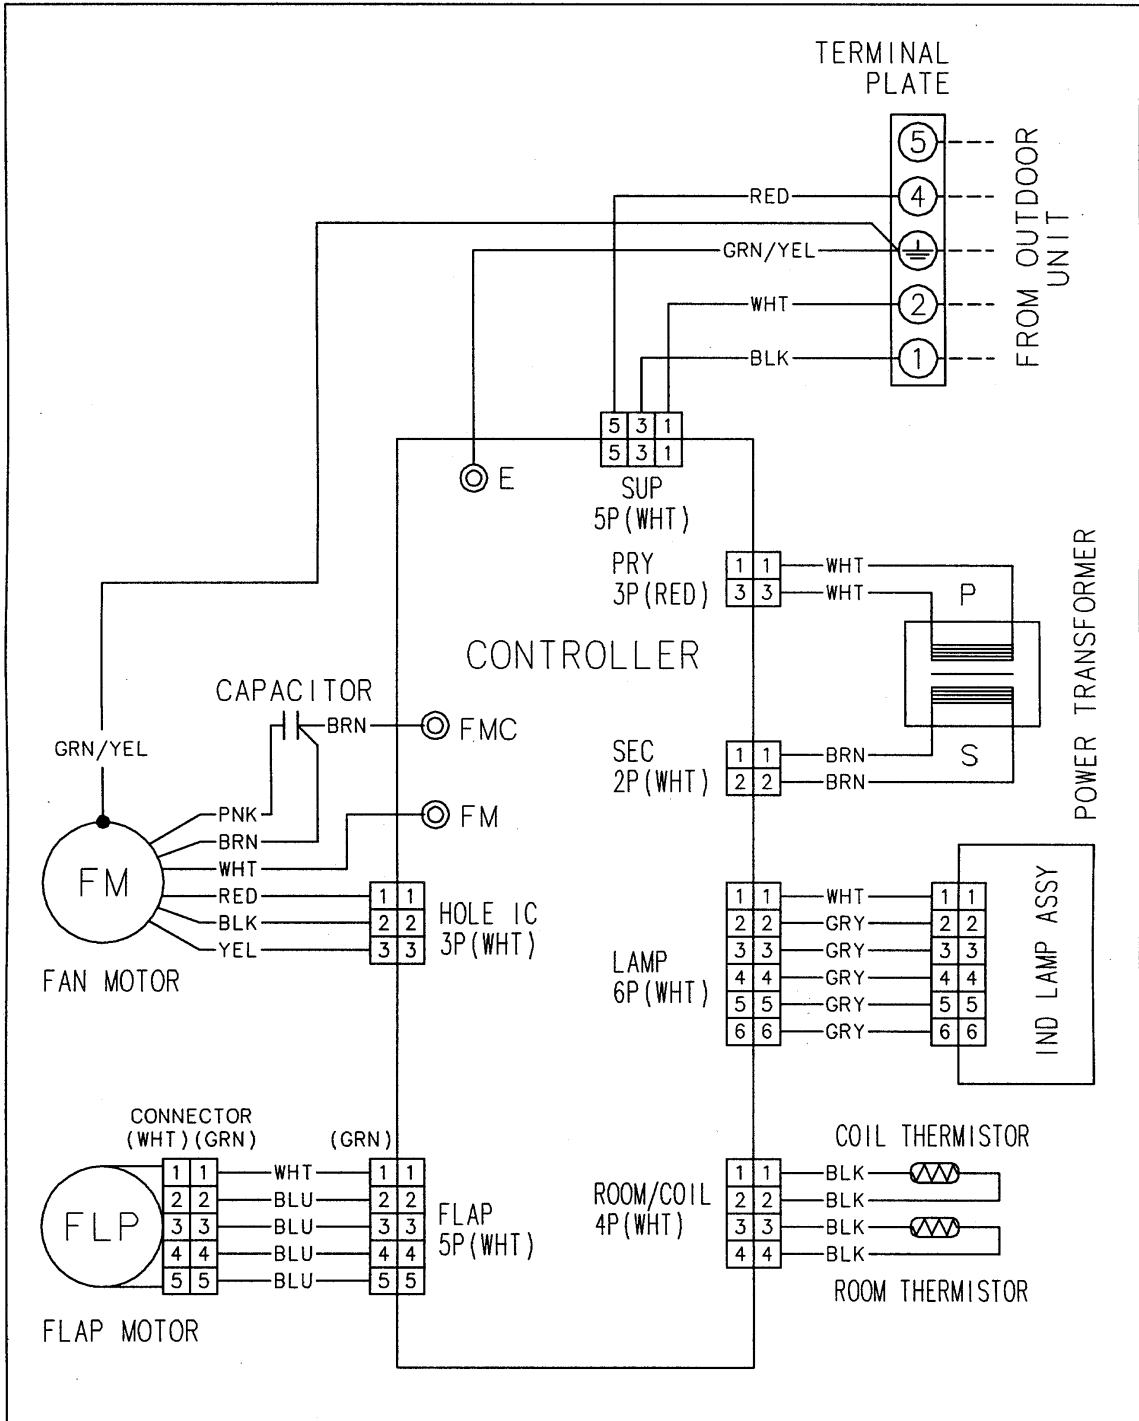


85S-2-5253-006-XX-1A

Outdoor Unit **SAP-C161GA**
SAP-C161JA
SAP-C181JA
SAP-C181BA



WARNING

To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

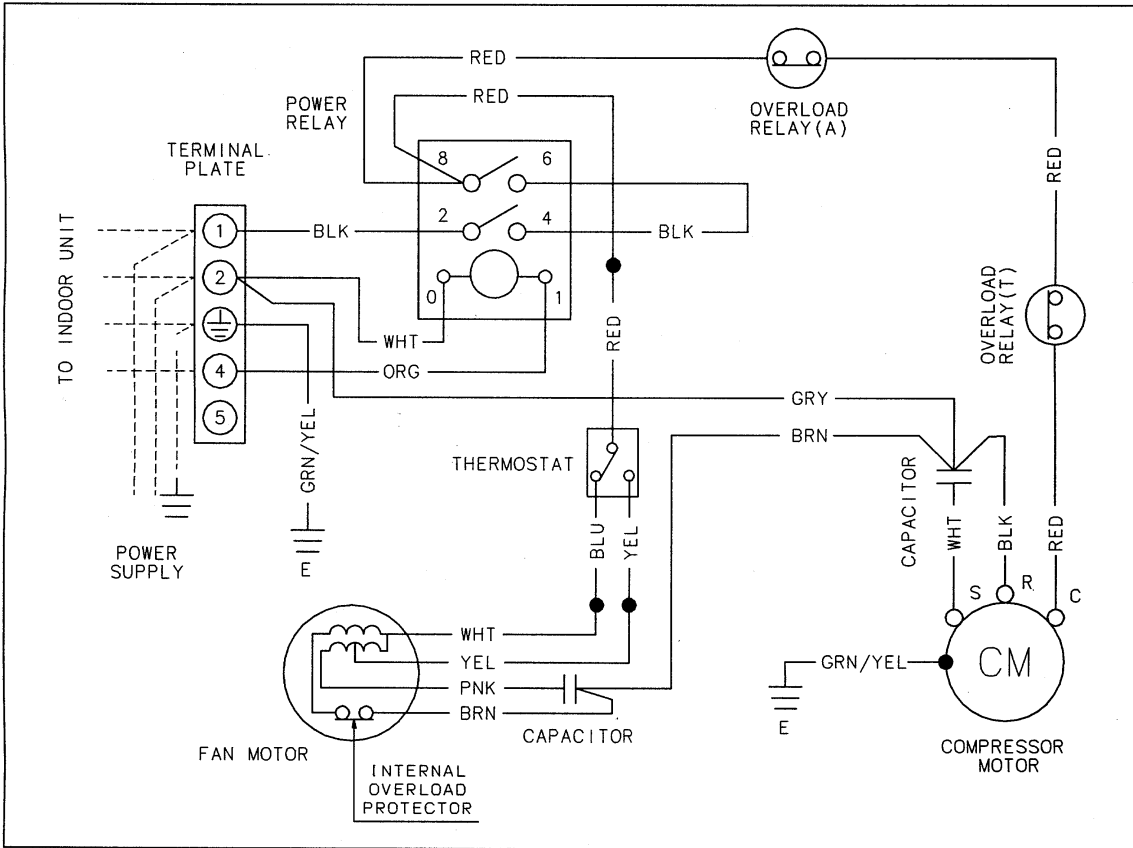


85S-2-5253-002-00-3

Outdoor Unit **SAP-C181GA**
SAP-C181MA



WARNING

To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

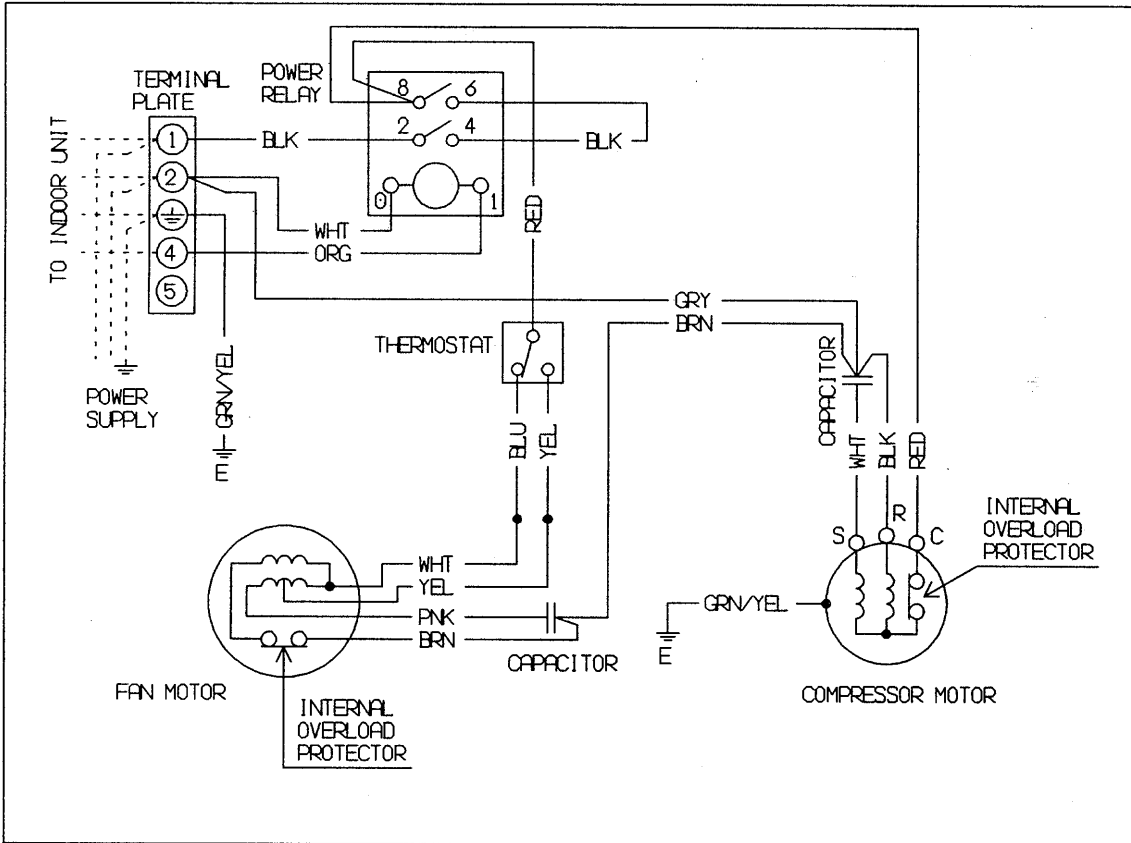


8512-5253-628XX-0

Outdoor Unit
SAP-C241GA
SAP-C241JA
SAP-C241MA
SAP-C241BA



WARNING

To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

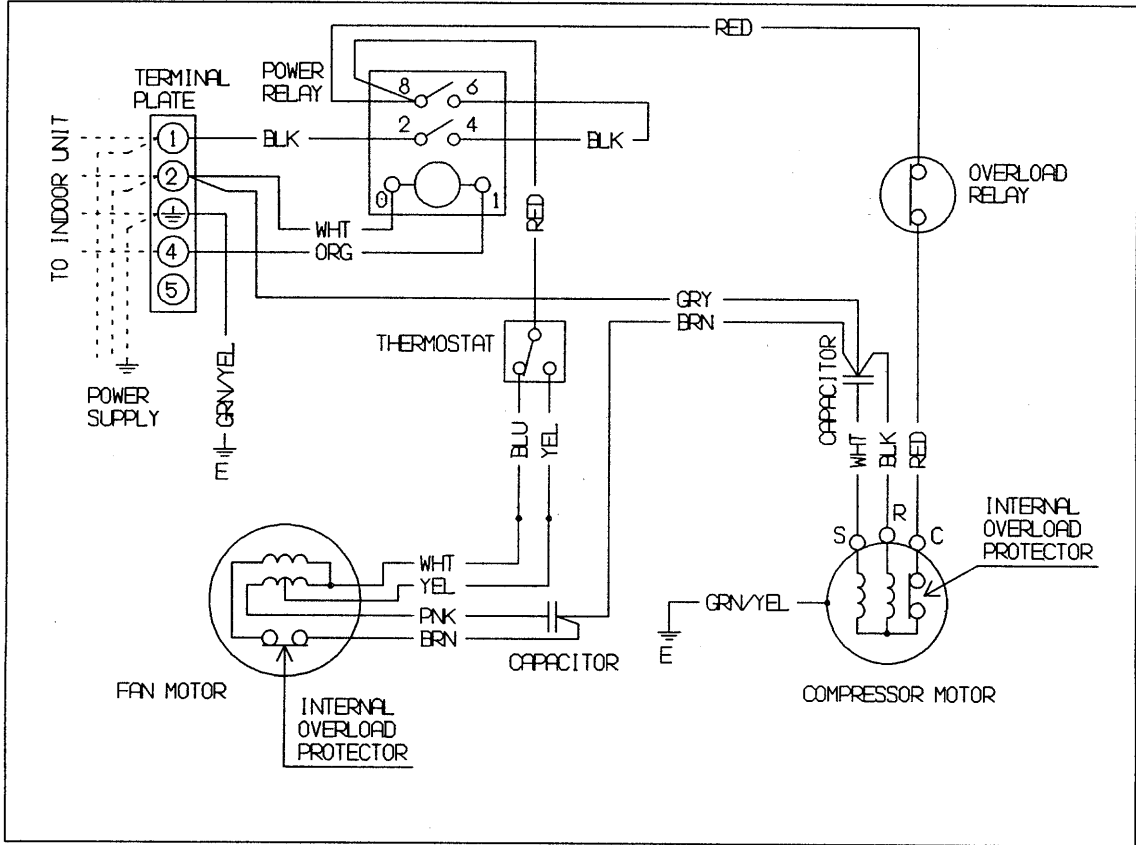

8512-5253-444XX-2

7. INSTALLATION INSTRUCTIONS


7-1. Installation Site Selection

Indoor Unit



WARNING

To prevent abnormal heat generation and the possibility of fire, don't place obstacles, enclosures and grills in front of or surrounding the air conditioner in a way that may block air flow.

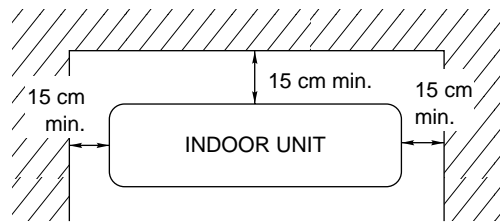

Front View
Fig.1

AVOID:

- direct sunlight.
- nearby heat sources that may affect performance of the unit.
- areas where leakage of flammable gas may be expected.
- places where large amounts of oil mist exist.

DO:

- select an appropriate position from which every corner of the room can be uniformly air-conditioned. (High on a wall is best)
- select a location that will hold the weight of the unit.
- select a location where tubing and drain pipe have the shortest run to the outside.
- allow room for operation and maintenance as well as unrestricted air flow around the unit. (Fig. 1)
- install the unit within the maximum elevation difference (H) above or below the outdoor unit and within a total tubing length (L) from the outdoor unit as detailed Table 1 and Fig. 2a.

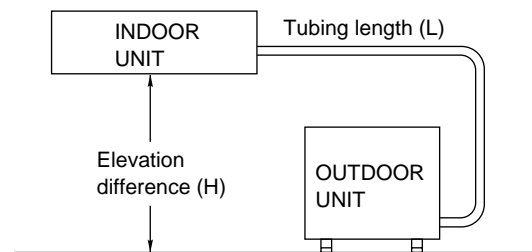


Fig. 2a



CAUTION

For stable operation of the air conditioner, do not install wall-mounted type indoor units under 1.5m from floor level.

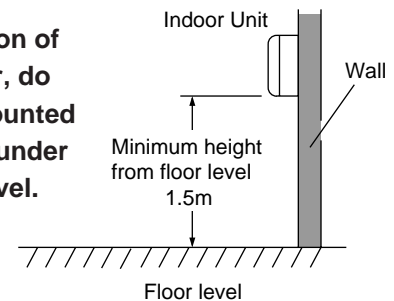


Fig. 2b

Table 1

Model	Max. Allowable Tubing Length at Shipment (m)	Limit of Tubing Length (L) (m)	Limit of Elevation Difference (H) (m)	Required Amount of Additional Refrigerant (g/m)*
C161, C181	7.5	20	7	25
C241	10	30		

* If total tubing length becomes 7.5 to 20 m (max.) or 10 to 30 m (max.), charge additional refrigerant (R22) by 25 g/m. No additional charge of compressor oil is necessary.


Outdoor Unit

AVOID:


- heat sources, exhaust fans, etc. (Fig. 3)
- damp, humid or uneven locations.

DO:

- choose a place as cool as possible.
- choose a place that is well ventilated.
- allow enough room around the unit for air intake/exhaust and possible maintenance. (Figs. 4a and 4a)
- provide a solid base (concrete block, 10 × 40 cm beams or equal), a minimum of 10 cm above ground level to reduce humidity and protect the unit against possible water damage and decreased service life. (Fig.5)
- use lug bolts or equal to bolt down unit, reducing vibration and noise.

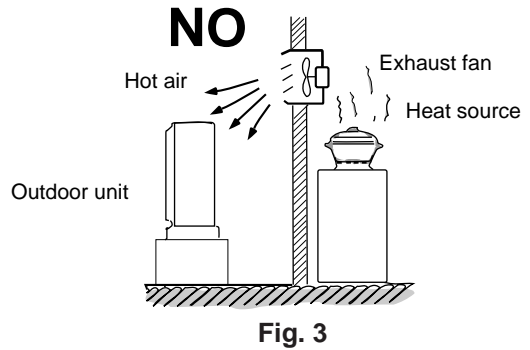


Required space around the unit.

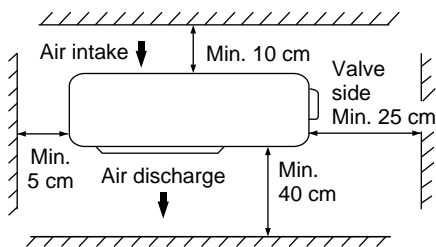

Top View

Fig. 4a

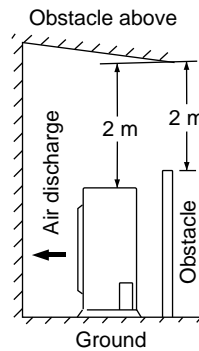

Side View

Fig. 4b

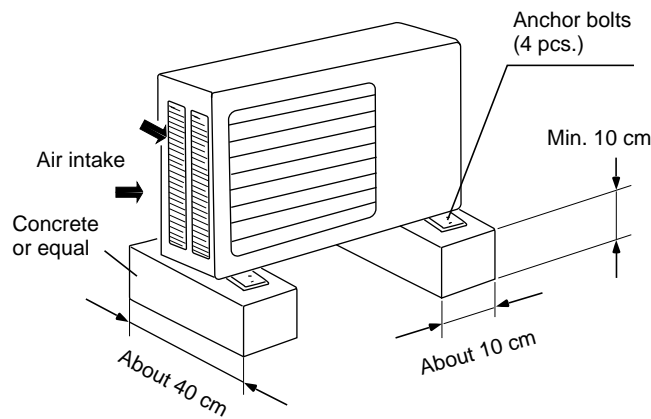


Fig. 5

7-2. Remote Control Unit Installation Position

The remote control unit can be operated from either a non-fixed position or a wall-mounted position.

To ensure that the air conditioner operates correctly, do not install the remote control unit in the following places:

- In direct sunlight
- Behind a curtain or other place where it is covered
- More than 8 m away from the air conditioner
- In the path of the air conditioner's airstream
- Where it may become extremely hot or cold
- Where it may be subject to electrical or magnetic interference

6-1. When attaching to wall (Fig.6a)

- 1) Confirm the indoor unit beeps when the ON/OFF button is pressed at the wall location where the remote control unit is to be attached, then attach the holder to the wall.
- 2) When taking out the remote control unit, pull it from the holder.

When using the remote control unit

- Point the transmission portion of the remote control unit at the receiver area of the indoor unit when operating the remote control unit, and during operation of the air conditioner.
- Do not place objects which may block the transmitted signals between the receiver and the remote control unit.

When mounting the remote control unit to prevent theft (Fig.6b)

- 1) Attach the holder to the wall with one of the screws (using only the hole in the top of the holder).
- 2) Remove the cover of the remote control unit and take out the batteries. Next, place the remote control unit in the holder.
- 3) Fasten both the remote control unit and holder to the wall with the remaining screw (using the hole in the bottom of the holder).
- 4) Install the batteries in the remote control unit and close the cover.

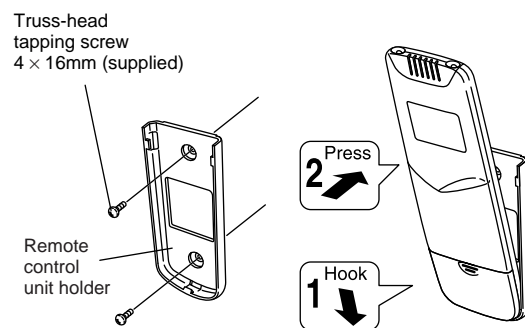


Fig.6a

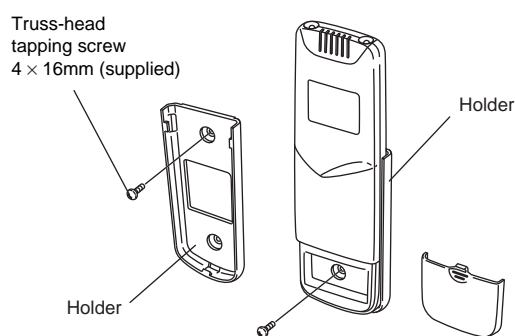


Fig.6b

7-3. Recommended Wire Length and Size

Regulations on wiring diameter differ from locality to locality. For field wiring requirements, please refer to your local electrical codes. Carefully observe these regulations when carrying out the installation.

NOTE

Refer to the WIRING SYSTEM DIAGRAM for the meaning of "A" and "B" in Table 2.

Table 2 lists recommended wire lengths and cross section area for power supply systems.


Table 2

Model	(A) Power Supply Wiring Length (m)					(B) Power Line (m)	Fuse or Circuit Breaker Capacity
	2 mm ²	3.5 mm ²	5.5 mm ²	8 mm ²	1.4 mm ²	2 mm ²	
C161GA, JA	—	30	—	—	—	20	15A
C181GA, JA, MA, BA	—	22	38	—	—		20A
C241GA, MA	—	18	32	48	77		30A
C241JA, BA	—	16	27	41	72		



WARNING

- Be sure to comply with local codes on running the wire from the indoor unit to the outdoor unit (size of wire and wiring method, etc.).
- Each wire must be firmly connected.
- No wire should be allowed to touch refrigerant tubing, the compressor, or any moving part.



WARNING


To avoid the risk of electric shock, each air conditioner unit must be grounded.



CAUTION

- Be sure to connect the power supply line to the outdoor unit as shown in the wiring diagram. The indoor unit draws its power from the outdoor unit.

WIRING SYSTEM DIAGRAM

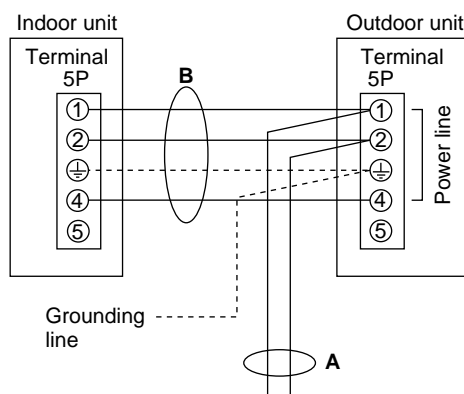


Power supply :
50 Hz, 1-phase, 220-240V AC
60 Hz, 1-phase, 220V AC

8. FUNCTION

8-1. Room Temperature Control


- Room temperature control is obtained by cycling the compressor ON and OFF under control of the room temperature sensor in the remote control unit.
- The room temperature (and other information) is transmitted every 3 minutes by the remote control unit to the controller in the indoor unit.

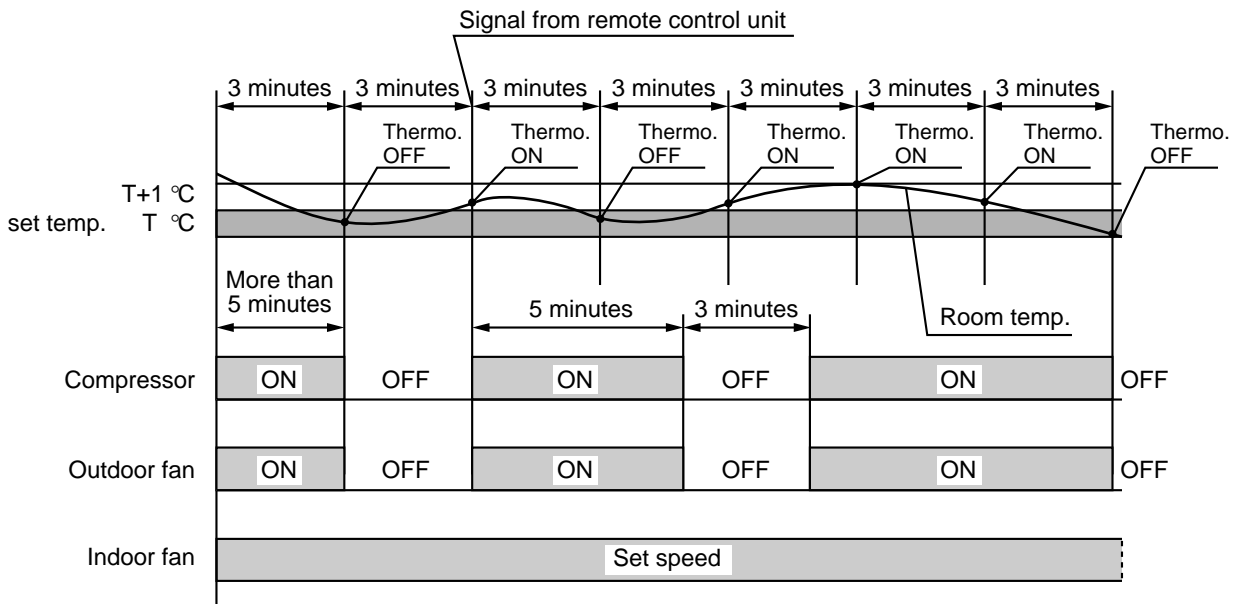

- The control circuit will not attempt to turn the compressor ON until the compressor has been OFF for at least 3 minutes. To protect the compressor from stalling out when trying to start against the high side refrigerant pressure, the control circuit has a built-in automatic time delay to allow the internal pressure to equalize.
- As a protective measure, the control circuit switches the compressor OFF after 5 minutes or more of compressor operation.
- Thermo. ON : When the room temperature is above $T + 1^{\circ}\text{C}$ ($T^{\circ}\text{C}$ is set temperature).
Compressor → ON
- Thermo. OFF : When the room temperature is equal to or below set temperature $T^{\circ}\text{C}$.
Compressor → OFF

8-2. Dry Operation (Dehumidification)

- Dry operation uses the ability of the cooling cycle to remove moisture from the air, but by running at low level to dehumidify without greatly reducing the room temperature. The air conditioner repeats the cycle of turning ON and OFF automatically as shown in the chart below according to the room temperature.

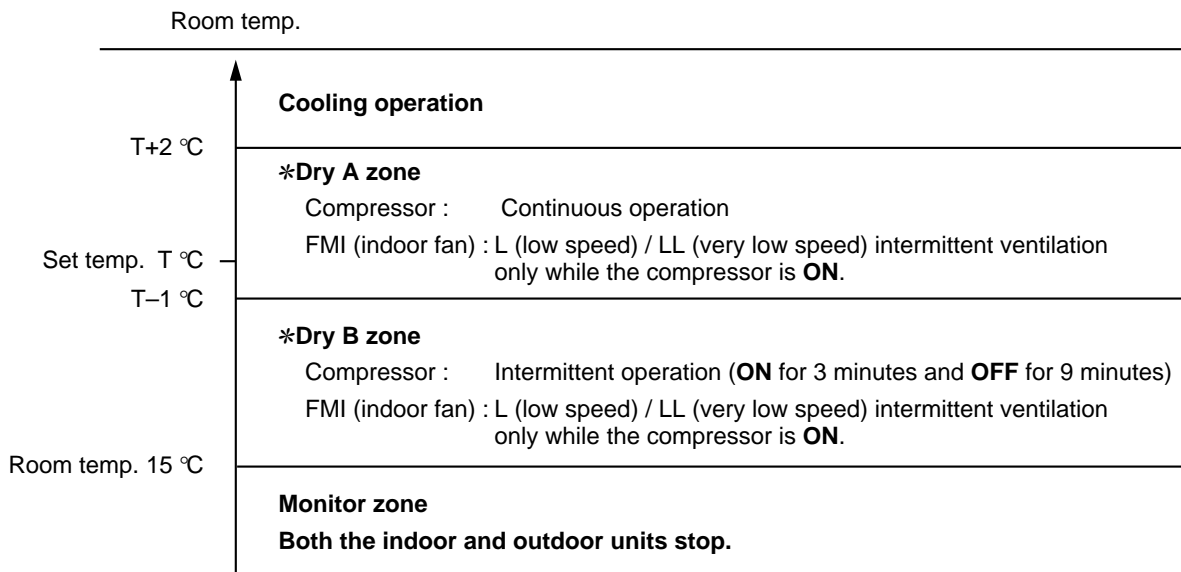


NOTE

- Intermittent ventilation occurs by switching the indoor fan speed between L ↔ LL.
- Dry operation does not occur when the room temperature is under 15°C, which is the monitor zone.
- When the compressor stops, the indoor fan stops as well.

8-3. Freeze Prevention


- This function prevents freezing of the indoor heat exchange coil.
- When the compressor has been running for 10 minutes or more and the temperature of the indoor heat exchange coil falls below -1°C , the control circuit stops the compressor for at least 6 minutes. The compressor does not start again until the temperature rises above 8°C or 6 minutes has elapsed.

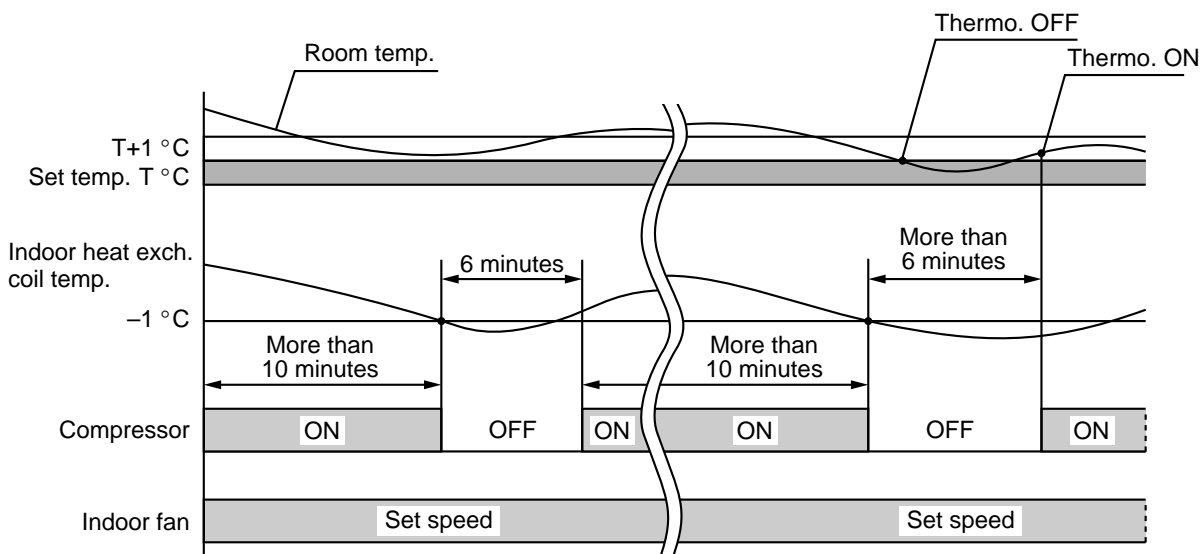

8-4. Outdoor Fan Speed Control


- To optimize performance of the air conditioner, the outdoor fan speed is switched automatically according to the outdoor temperature.
- If the outdoor air temperature falls below 28.5°C, the fan speed switches to LOW.
- If the outdoor air temperature rises above 31.5°C, the fan speed switches to HIGH.

The operating temperature shown as 31.5 and 28.5 in the chart differ by models

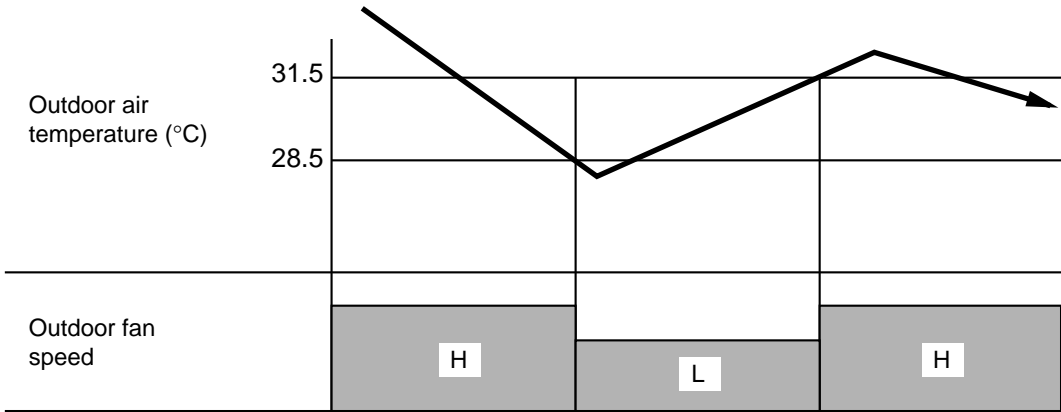

9. TROUBLESHOOTING

9-1. Check before and after troubleshooting




WARNING

Hazardous voltage can cause **ELECTRIC SHOCK** or **DEATH**. Disconnect power or turn off circuit breaker before you start checking or servicing.

9-1-1. Check power supply wiring.

- Check that power supply wires are correctly connected to terminals **No.1** and **No.2** on the terminal plate in the outdoor unit.

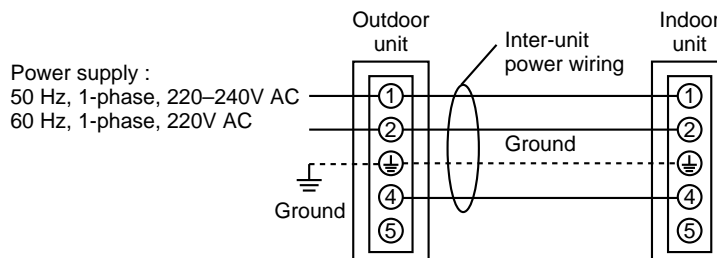

9-1-2. Check inter-unit wiring.

- Check that inter-unit wiring is correctly connected to the indoor unit from the outdoor unit.

9-1-3. Check power supply.

- Check that voltage is in specified range ($\pm 10\%$ of the rating).
- Check that power is being supplied.

9-1-4. Check lead wires and connectors in indoor and outdoor units.

- Check that coating of lead wires is not damaged.
- Check that lead wires and connectors are firmly connected.
- Check that wiring is correct.


9-2. Air conditioner does not operate.

9-2-1. Circuit breaker trips (or fuse blows).

A. When the circuit breaker is set to ON, it is tripped soon. (Resetting is not possible.)


- There is a possibility of ground fault.
- Check insulation resistance.

If resistance value is $2M\Omega$ or less, insulation is defective ("NO").

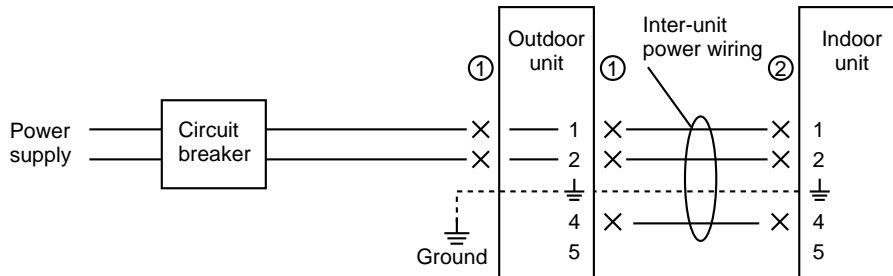


WARNING

* Set circuit breaker to OFF.

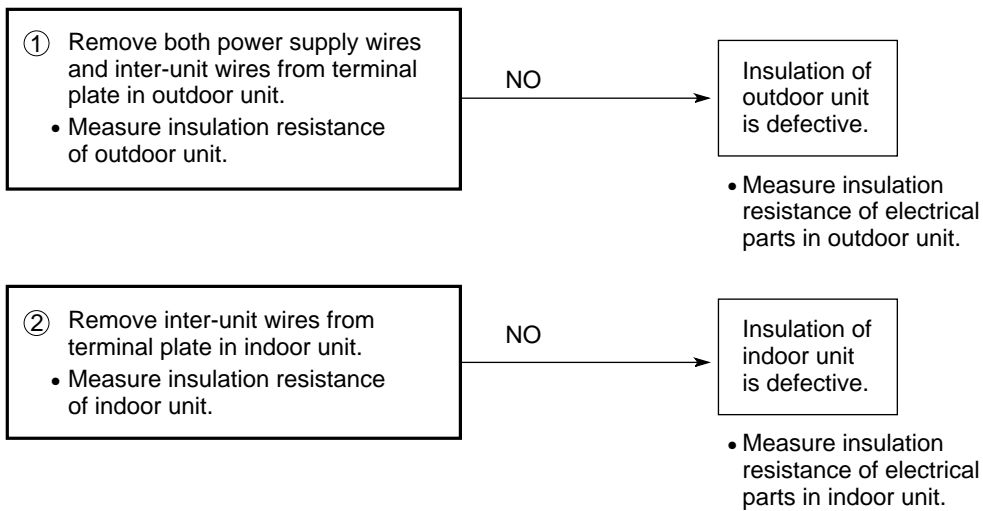


B. Circuit breaker trips in several minutes after turning the air conditioner on.

- There is a possibility of short circuit.

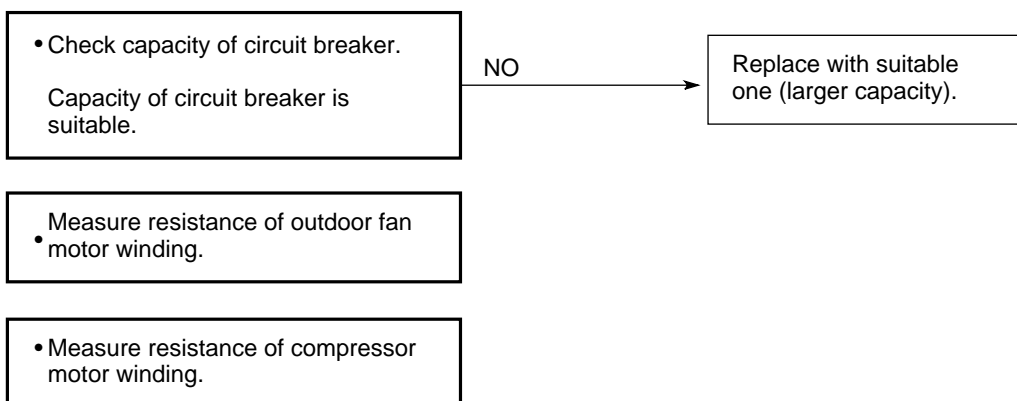


9-2-2. Neither indoor nor outdoor unit runs.


A. Power is not supplied.

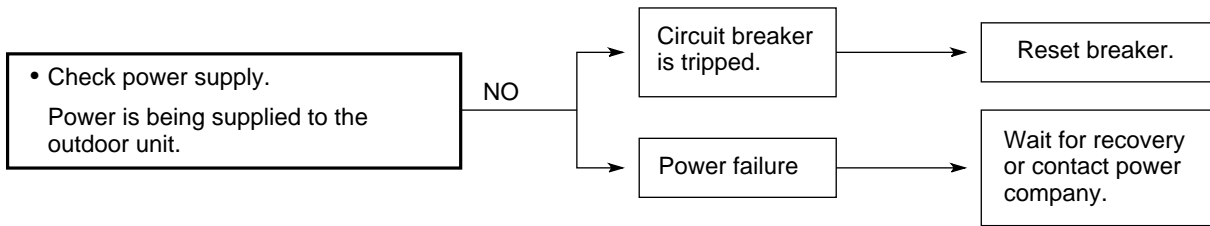


B. Check remote control unit.

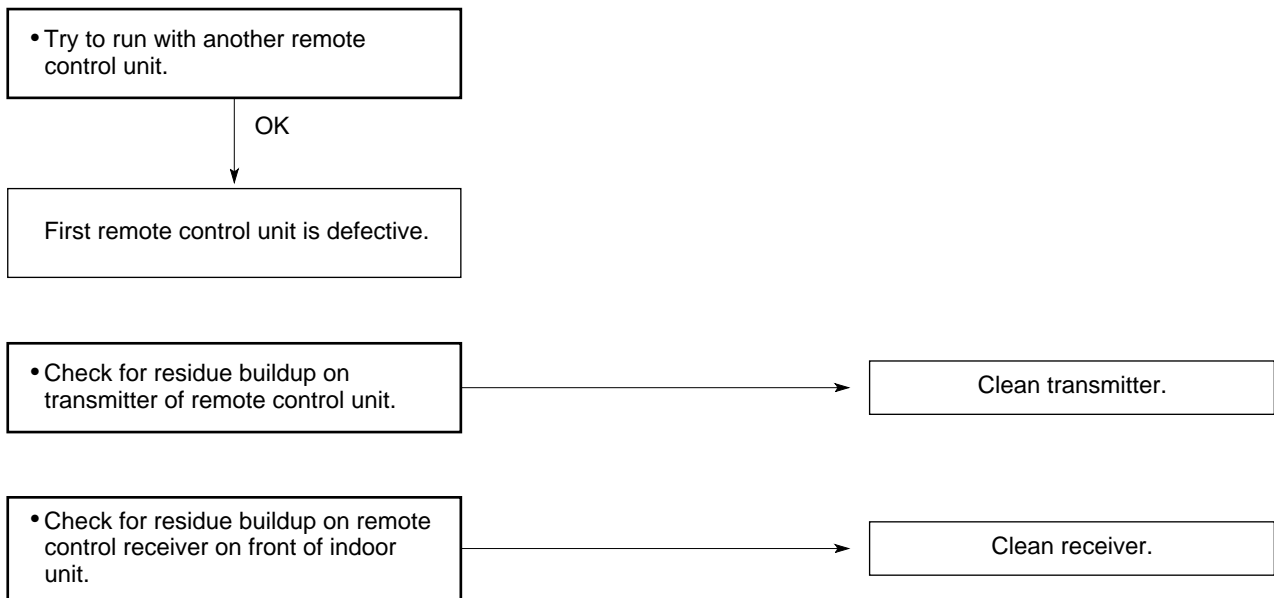


C. Check "OPERATION selector" switch in the indoor unit.

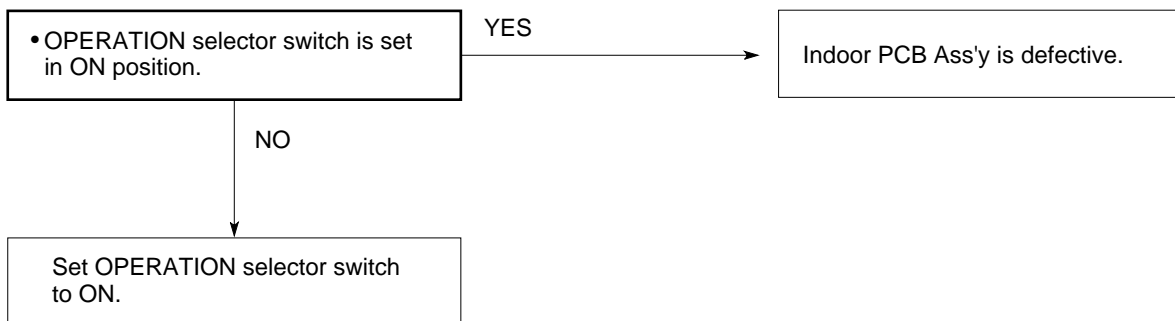

D. Check transformer in indoor unit.



E. Check fuse on the indoor PCB Ass'y.

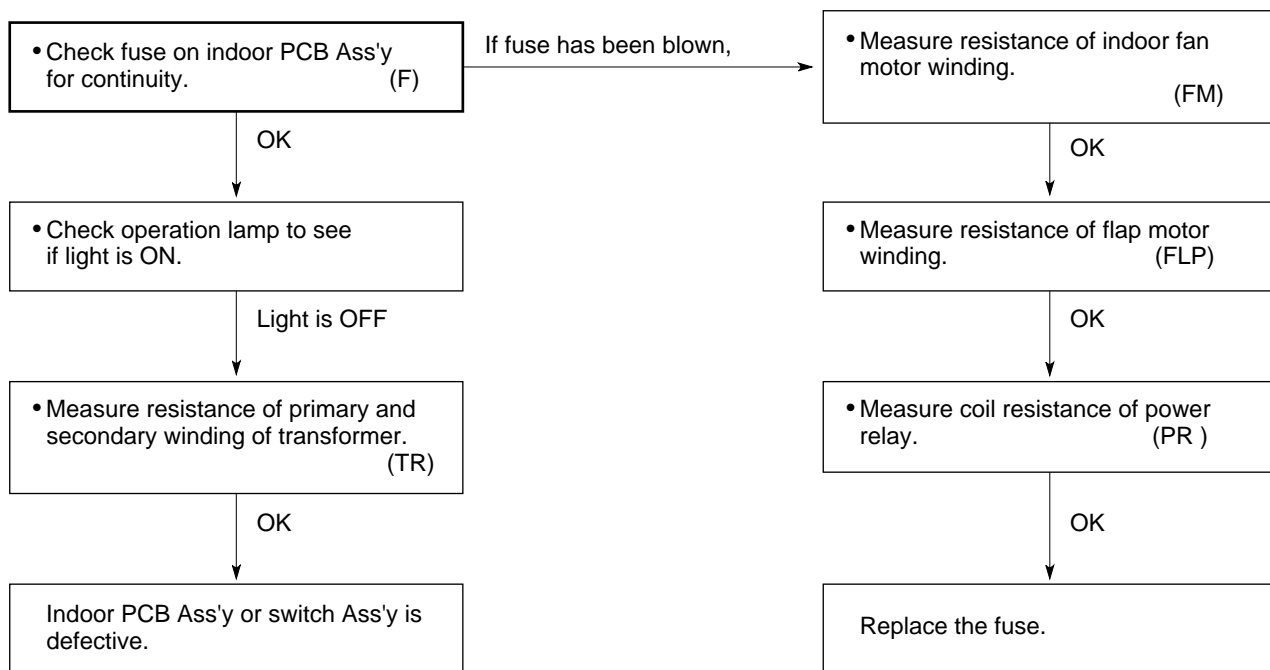


F. Check TIMER on the remote control unit.




9-2-3. Only outdoor unit does not run.

A. Check setting temperature.

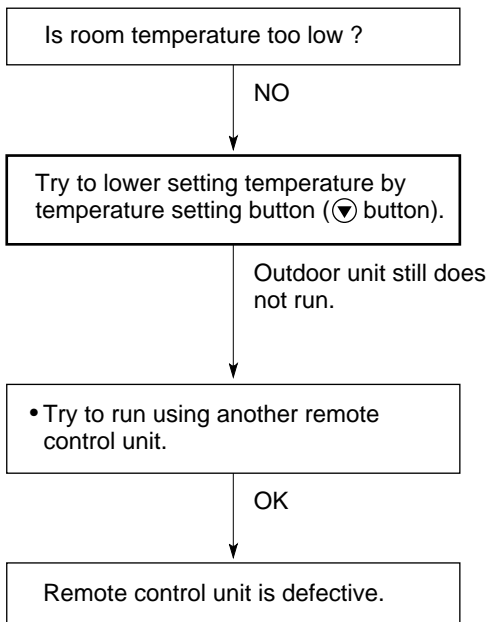


B. Check power relay in outdoor unit.

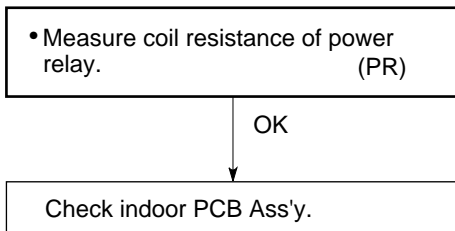


9-3. Some part of air conditioner does not operate.


9-3-1. Only indoor fan does not run.

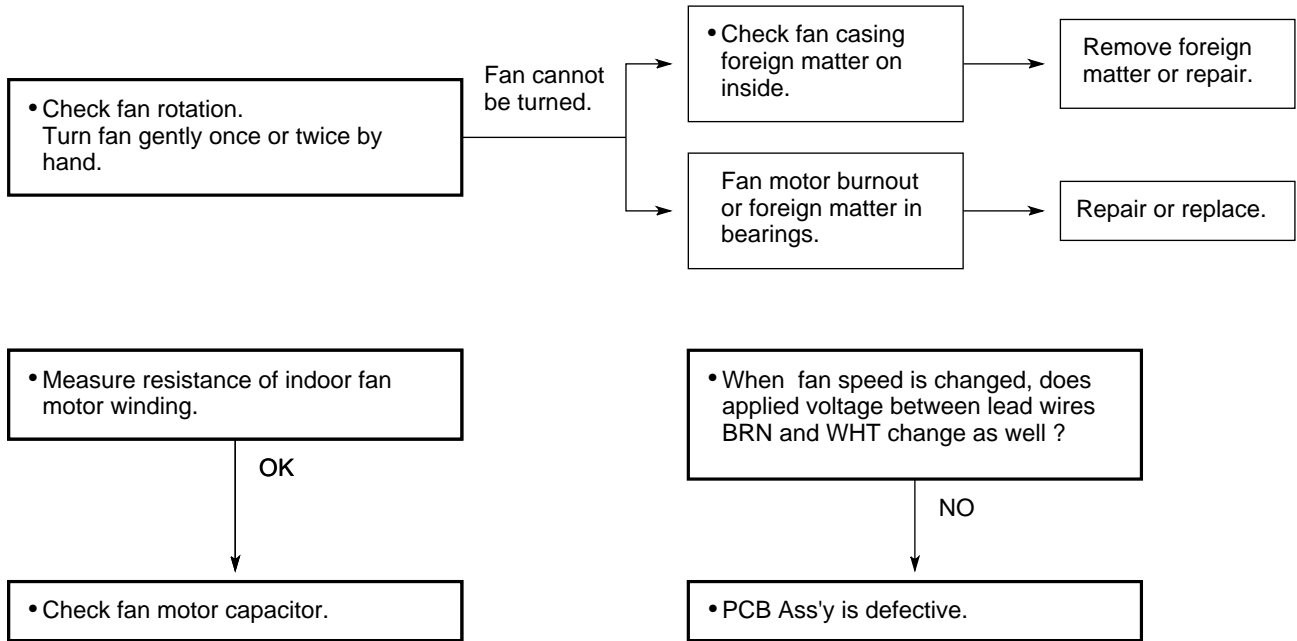


9-3-2. Only outdoor fan does not run.

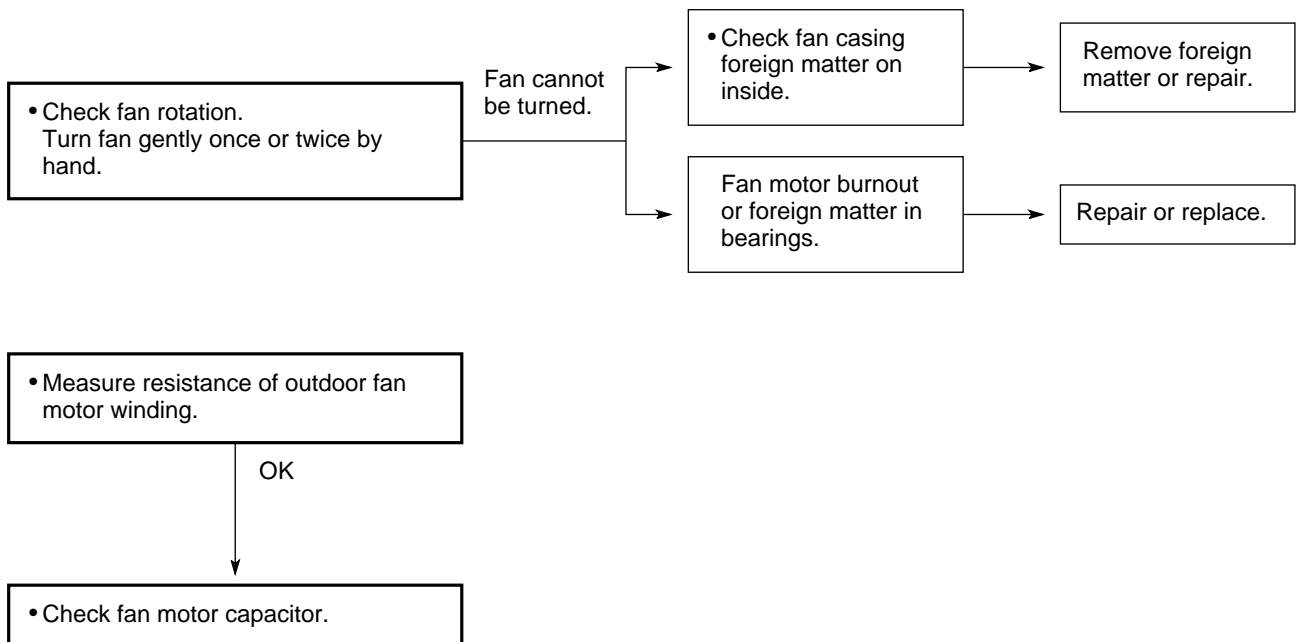


9-3-3. Only compressor does not run.

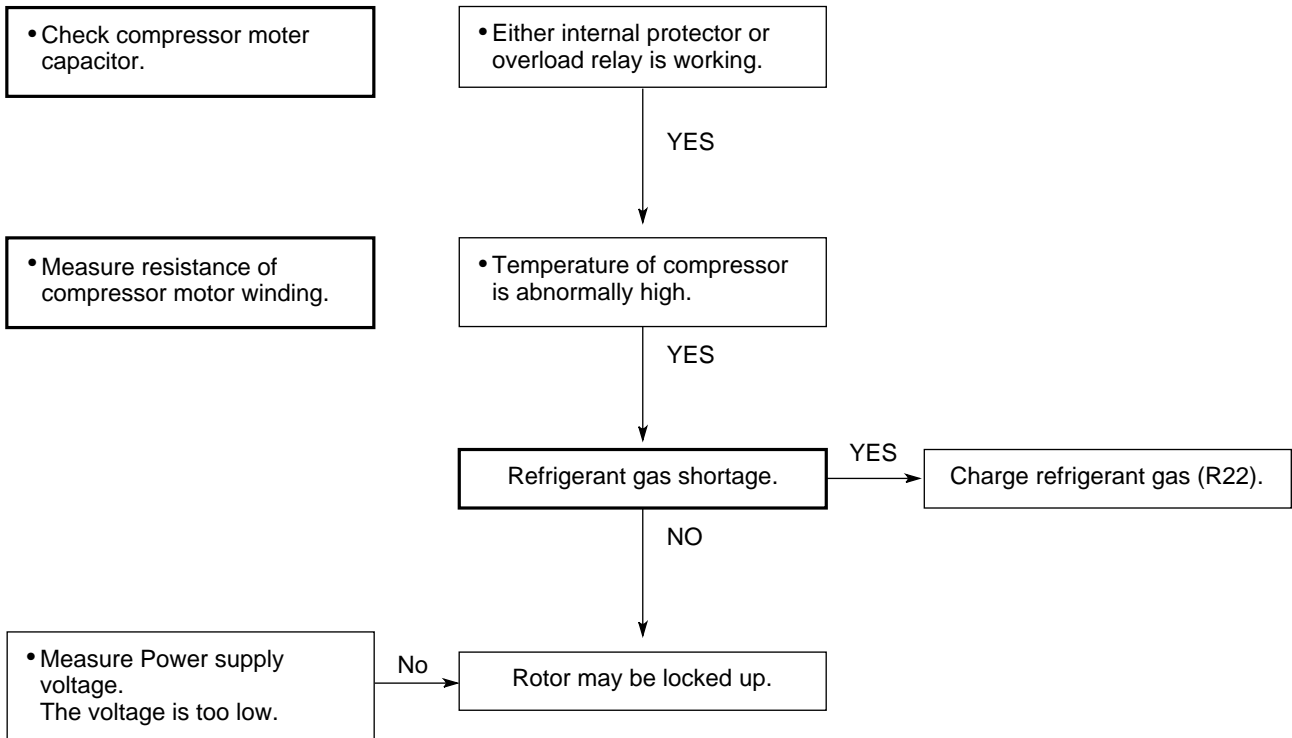

9-3-4. Only flap motor does not run.




9-3-5. Function of outdoor fan speed control does not work properly.




Refer to "8-4. Outdoor Fan Speed Control".

9-4. Air conditioner operates, but abnormalities are observed.

9-4-1. Poor cooling.

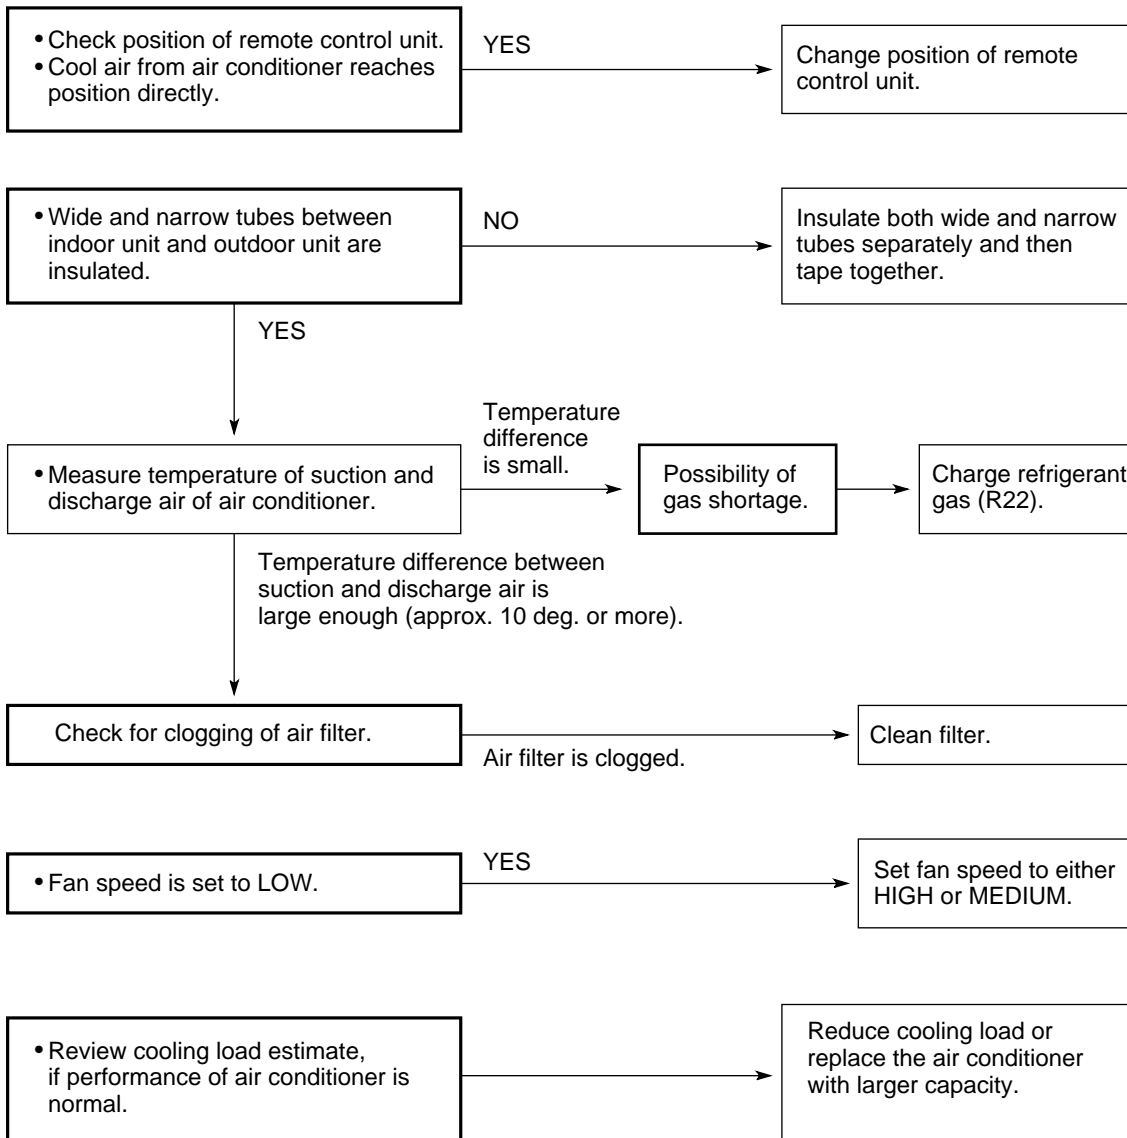

9-4-2. Excessive cooling.

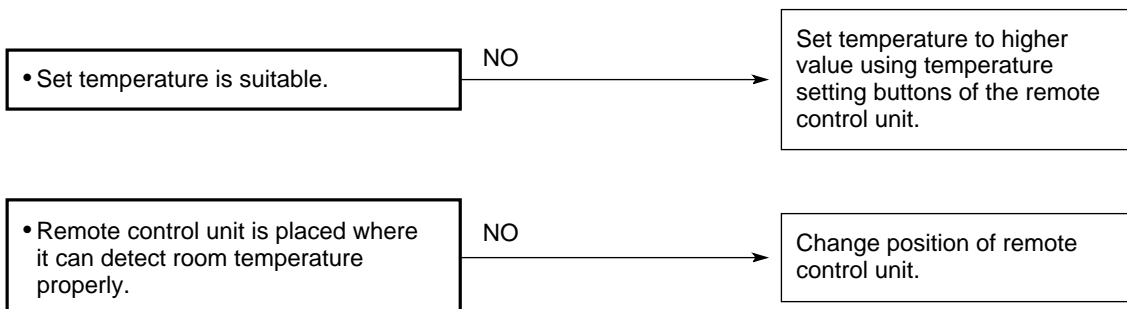

9-5. If a sensor is defective.

9-5-1. Indoor coil temp. thermistor (TH1) is defective.

A. Open

When thermistor opens, the air conditioner will be in the following conditions as the controller tries to detect extremely low indoor coil temperature.

In Cooling mode: Function of freeze prevention continues to work. That is, the controller turns both compressor and outdoor fan motor periodically ON and OFF for several minutes. (Refer to "8-3. Freeze Prevention")

B. Short

When thermistor is short, the air conditioner will be in the following conditions as the controller tries to detect extremely high indoor coil temperature.

In Cooling mode: Function of freeze prevention will not work even when the frost builds up on indoor heat exchanger coil

9-5-2. Room temp. thermistor (TH2) is defective.

A. Open


When thermistor opens, the air conditioner will be in the following conditions as the controller tries to detect extremely low room temperature.

In Cooling mode: The air conditioner soon stops and will not start again. (Thermo.OFF) Neither outdoor fan nor compressor runs.

B. Short

When thermistor is short, the air conditioner will be in the following conditions as the controller tries to detect extremely high room temperature.

In Cooling mode: The air conditioner continues to operate (Thermo.ON). Both the outdoor fan and compressor do not stop. As a result, the room becomes too cold.

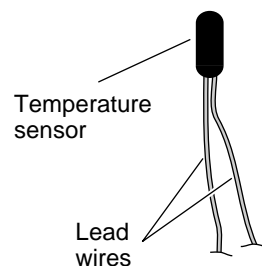

NOTE

Definition of Open or Short Circuit of Sensor (Thermistor)

Open ... A lead wire is broken or disconnected or the circuit inside the temperature sensor is open .

Short ... The protective cover of a lead wire has been damaged, and the exposed wire is touching another metal part, or both lead wires have become exposed and are touching each other. Alternatively, the circuit inside the temperature sensor is closed.

Thermistor Structure

10. CHECKING ELECTRICAL COMPONENTS

10-1. Measurement of Insulation Resistance

- The insulation is in good condition if the resistance exceeds $2M\Omega$.

10-1-1. Power Supply Wires

Clamp the ground wire of the power supply wires with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on either of the power wires. (Fig. 1)

Then measure the resistance between the ground wire and the other power wire. (Fig. 1)

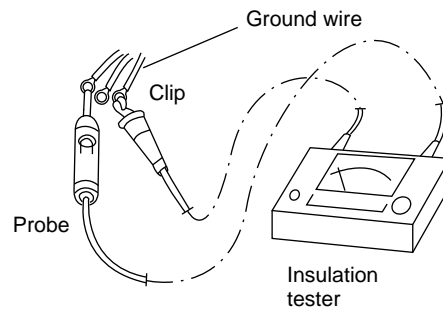


Fig. 1

10-1-2. Indoor Unit

Clamp an aluminum plate fin or copper tube with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on each terminal screw on the terminal plate. (Fig. 2)

Note that the ground line terminal should be skipped for the check.

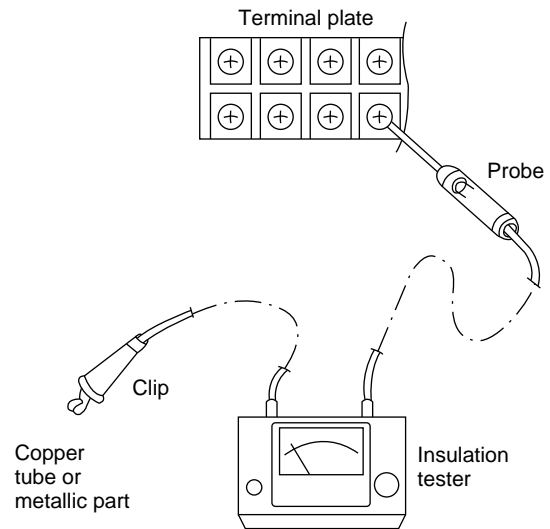


Fig. 2

10-1-3. Outdoor Unit

Clamp an aluminum plate fin or copper tube with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on each terminal screw where power supply lines are connected on the terminal plate. (Fig. 2)

10-1-4. Measurement of Insulation Resistance for Electrical Parts

Disconnect the lead wires of the desired electric part from terminal plate, capacitor, etc. Similarly disconnect the connector. Then measure the insulation resistance. (Figs. 3 and 4)

NOTE

Refer to Electric Wiring Diagram.

If the probe cannot enter the poles because the hole is too narrow then use a probe with a thinner pin.

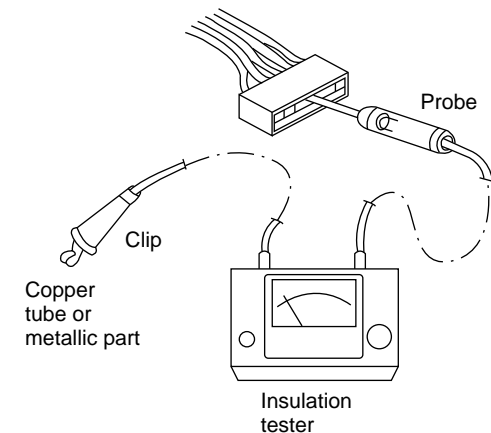


Fig. 3

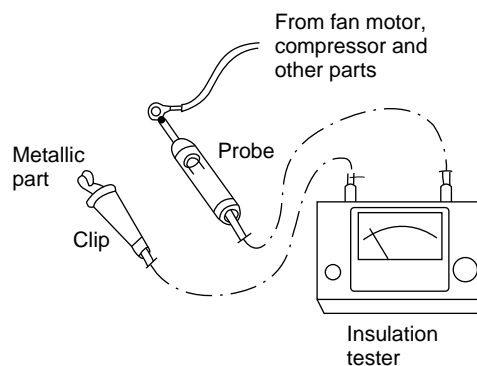


Fig. 4

10-2. Checking Continuity of Fuse on PCB Ass'y

- Remove the PCB Ass'y from the electrical component box. Then pull out the fuse from the PCB Ass'y. (Fig. 5)
- Check for continuity using a multimeter as shown in Fig. 6.

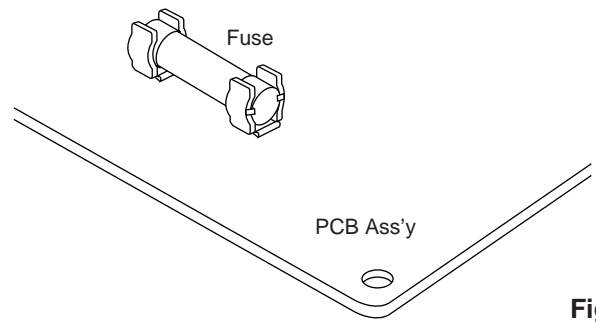


Fig. 5

10-3. Checking Motor Capacitor

Remove the lead wires from the capacitor terminals, and then place a probe on the capacitor terminals as shown in Fig. 7. Observe the deflection of the pointer, setting the resistance measuring range of the multimeter to the maximum value.

The capacitor is “good” if the pointer bounces to a great extent and then gradually returns to its original position.

The range of deflection and deflection time differ according to the capacity of the capacitor.

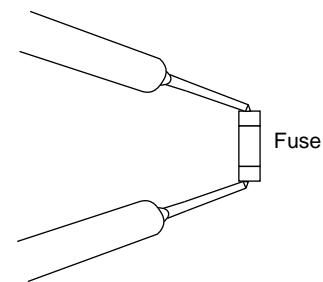


Fig. 6

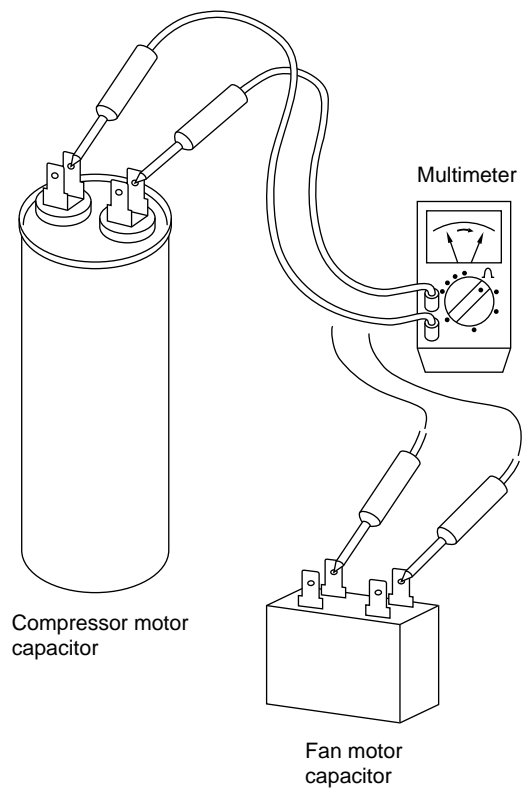


Fig. 7

11. MAINTENANCE

11-1. Changing Address of Remote Control Unit in Indoor Unit


If you are installing more than 1 indoor unit (up to 2) in the same room, it is necessary for you to assign each unit its own address, so each can be operated by its own separate remote control unit. You assign the addresses by matching the remote address on the PCB of each indoor unit with the switch positions of its remote control unit.

NOTE Once changed, you cannot restore the original address setting of the remote control unit.

To Change Address on PCB

- (1) Cut jumper wire (JP11) on the indoor unit PCB.
Use cutting pliers to cut and disconnect the Jumper wire.
- (2) Switch the address switch on the remote control unit to "B" position.
- (3) After inserting the batteries, press reset button.


Control PCB on Indoor Unit

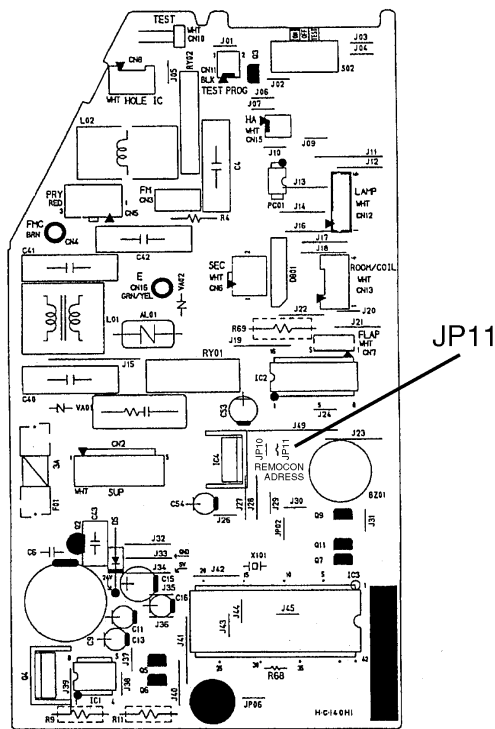


To Change Address on Remote Control Unit

NOTE Remove the batteries before changing the address.

- (1) Remove tab marked A to change the address of the remote control unit.

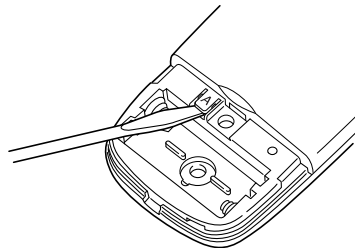

- (2) When it is removed, the address is automatically set to B.

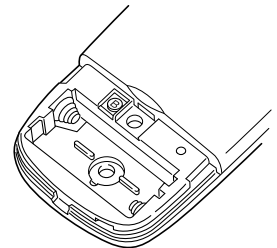

APPENDIX INSTRUCTION MANUAL

**SAP-K161GJA + SAP-C161GA
+ SAP-C161JA**

**SAP-K181GJA + SAP-C181GA
+ SAP-C181JA**

**SAP-K181MBA + SAP-C181MA
+ SAP-C181BA**

**SAP-K241GJA + SAP-C241GA
+ SAP-C241JA**

**SAP-K241MBA + SAP-C241MA
+ SAP-C241BA**

Features

This air conditioner is equipped with cooling and drying functions. Details on these functions are provided below; refer to these descriptions when using the air conditioner.

- **Compact Size**
This model is smaller than its predecessors and yet offers the same capabilities.
- **Microprocessor Controlled Operation**
The interior compartment of the remote control unit contains several features to facilitate automatic operation, easy logically displayed for easy use.
- **Simple One-touch Wireless Remote Control**
The remote control unit has several features to facilitate automatic operation.
- **12-Hour ON or OFF Timer**
This timer can be set to automatically turn the unit on or off at any time within a 12 hour period.
- **1-Hour OFF Timer**
This timer can be set to automatically turn off the unit at any time after one hour.
- **Night Setback**
Pressing this button changes the setting of the room temperature thermostat, allowing you to set the temperature at whatever level that you find comfortable.
- **Automatic and 3-step Fan Speed**
Auto/High/Medium/Low
- **Air Sweep Control**
This function moves a flap up and down in the air outlet, directing air in a sweeping motion around the room and providing comfort in every corner.
- **Automatic Restart Function for Power Failure**
Even when power failure occurs, preset programmed operation can be reactivated once power resumes.
- **Anti-Mold Filter**
This unit is equipped with an anti-mold filter that inhibits the growth of mold and bacteria.
- **Optional Air Clean Filter**
An air filter that uses activated charcoal to eliminate unpleasant odors and clean the air is available (sold separately).

Contents

	Page
Features.....	2
Product Information	3
Alert Symbols	3
Installation Location	4
Electrical Requirements.....	4
Safety Instructions	4
Names of Parts	5
Using the Remote Control Unit.....	10
Operation with the Remote Control Unit.....	12
1. Operation	12
2. Adjusting the Fan Speed	13
3. Night Setback Mode	14
Special Remarks.....	15
Using the 12-Hour ON and OFF Timer	16
Using the 1-Hour OFF Timer	18
Adjusting the Airflow Direction.....	19
Operation without the Remote Control Unit.....	20
Care and Cleaning.....	20
Troubleshooting.....	23
Tips for Energy Saving	23

Product Information

If you have problems or questions concerning your Air Conditioner, you will need the following information. Model and serial numbers are on the nameplate of the cabinet.

Model No. _____ Serial No. _____

Date of purchase _____

Dealer's address _____

Phone number _____

Alert Symbols

The following symbols used in this manual, alert you to potentially dangerous conditions to users, service personnel or the appliance:



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

Installation Location

- We recommend that this air conditioner be installed properly by qualified installation technicians in accordance with the Installation Instructions provided with the unit.
- Before installation, check that the voltage of the electric supply in your home or office is the same as the voltage shown on the nameplate.



WARNING

- Do not install this air conditioner where there are fumes or flammable gases, or in an extremely humid space such as a greenhouse.
- Do not install the air conditioner where excessively high heat-generating objects are placed.

Avoid:

To protect the air conditioner from heavy corrosion, avoid installing the outdoor unit where salty sea water can splash directly onto it or in sulphurous air near a spa.

Electrical Requirements

1. All wiring must conform to the local electrical codes. Consult your dealer or a qualified electrician for details.
2. Each unit must be properly grounded with a ground (or earth) wire or through the supply wiring.
3. Wiring must be done by a qualified electrician.

Safety Instructions

- Read this Instruction Manual carefully before using this air conditioner. If you still have any difficulties or problems, consult your dealer for help.
- This air conditioner is designed to give you comfortable room conditions. Use this only for its intended purpose as described in this Instruction Manual.



WARNING


- Never use or store gasoline or other flammable vapor or liquid near the air conditioner — it is very dangerous.
- This air conditioner has no ventilator for intaking fresh air from outdoors. You must open doors or windows frequently when you use gas or oil heating appliances in the same room, which consume a lot of oxygen from the air. Otherwise there is a risk of suffocation in an extreme case.



CAUTION

- Do not turn the air conditioner on and off from the power mains switch. Use the ON/OFF operation button.
- Do not stick anything into the air outlet of the outdoor unit. This is dangerous because the fan is rotating at high speed.
- Do not let children play with the air conditioner.
- Do not cool the room too much if babies or invalids are present.

Names of Parts

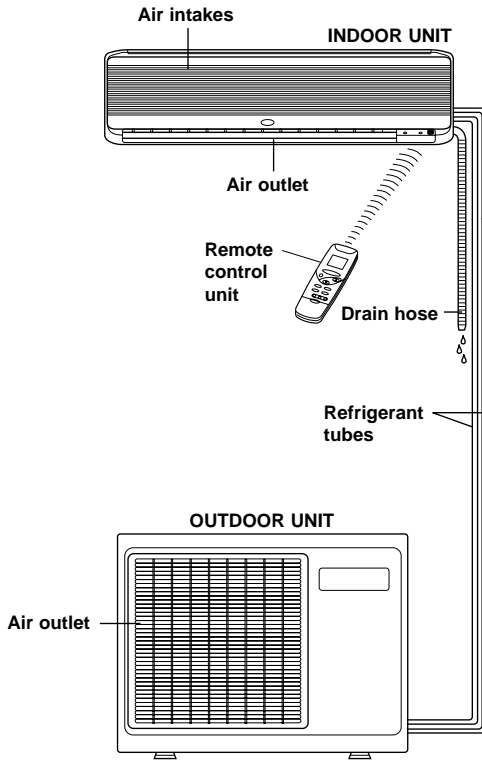

NOTE

This illustration is based on the external appearance of a standard model. Consequently, the shape may differ from that of the air conditioner you have selected.

This air conditioner consists of an indoor unit and an outdoor unit. You can control the air conditioner with the remote control unit.

Air Intake	Air from the room is drawn into this section and passes through air filters which remove dust.
Air Outlet	Conditioned air is blown out of the air conditioner through the air outlet.
Remote Control Unit	The wireless remote control unit controls power ON/OFF, operation mode selection, temperature, fan speed, timer setting, and air sweeping.
Refrigerant Tubes	The indoor and outdoor units are connected by copper tubes through which refrigerant gas flows.
Drain Hose	Moisture in the room condenses and drains off through this hose.
Outdoor (Condensing) Unit	The outdoor unit contains the compressor, fan motor, heat exchanger coil, and other electrical components.


Unit Display and Operation Selector





IMPORTANT


Avoid using radio equipment such as mobile phone near (within 1 m) the indoor unit. Some radio equipment may cause malfunction of the unit.

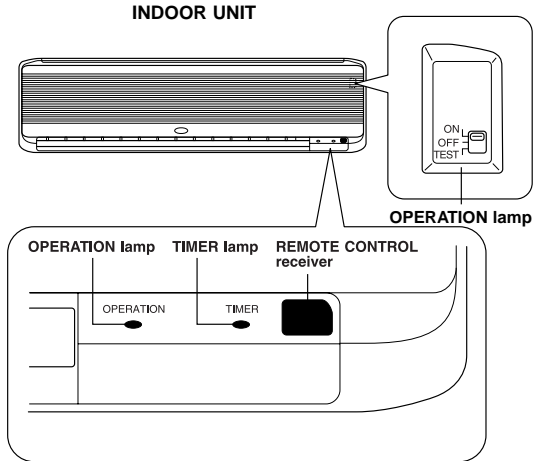If the trouble happens, disconnect power and restart the air conditioner after a few minutes.





<p>REMOTE CONTROL receiver</p>	<p>This section picks up infrared signals from the remote control unit (transmitter).</p>
<p>OPERATION selector ON position</p>	<p>This position is for operating the air conditioner with the wireless remote control unit. Set the selector normally in this position.</p>
<p>OFF position</p> <p> WARNING</p>	<p>Switch the selector to the OFF position if you are not going to use the air conditioner for a few days or longer.</p> <p>The OFF position does not disconnect the power. Use the main power switch to turn off power completely.</p>
<p>TEST position</p> <p> CAUTION</p>	<p>This position is used only when servicing the air conditioner.</p> <p>Do not set at the TEST position for normal operation.</p>
<p>OPERATION lamp</p>	<p>This lamp lights when the system is in the continuous DRY and COOL mode.</p>
<p>TIMER lamp</p>	<p>This lamp lights when the system is being controlled by the timer.</p>

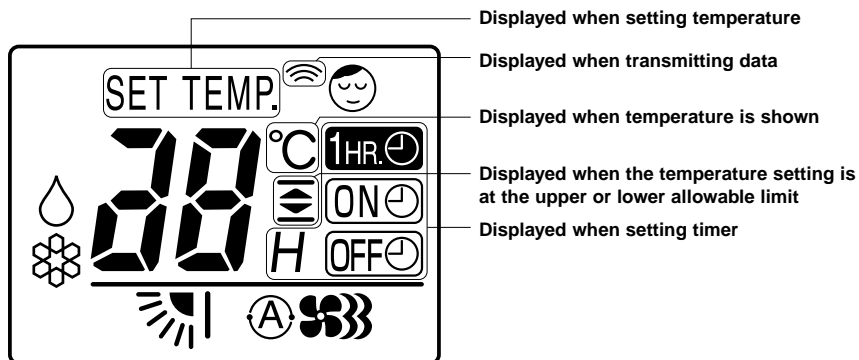Remote Control Unit (Display)







Symbols


(1) Operation mode

COOL	
MILD DRY	


(2) Fan speed

Automatic operation	
HIGH	
MEDIUM	
LOW	

(3) Set temperature

16 – 30°C	
When set to 28 °C	

(4) Timer

12-hour ON Timer	
12-hour OFF Timer	
1-hour OFF Timer	

(5) NIGHT SETBACK



(6) Confirmation of transmission




(7) Flap angle indication



(8) Sweep indication





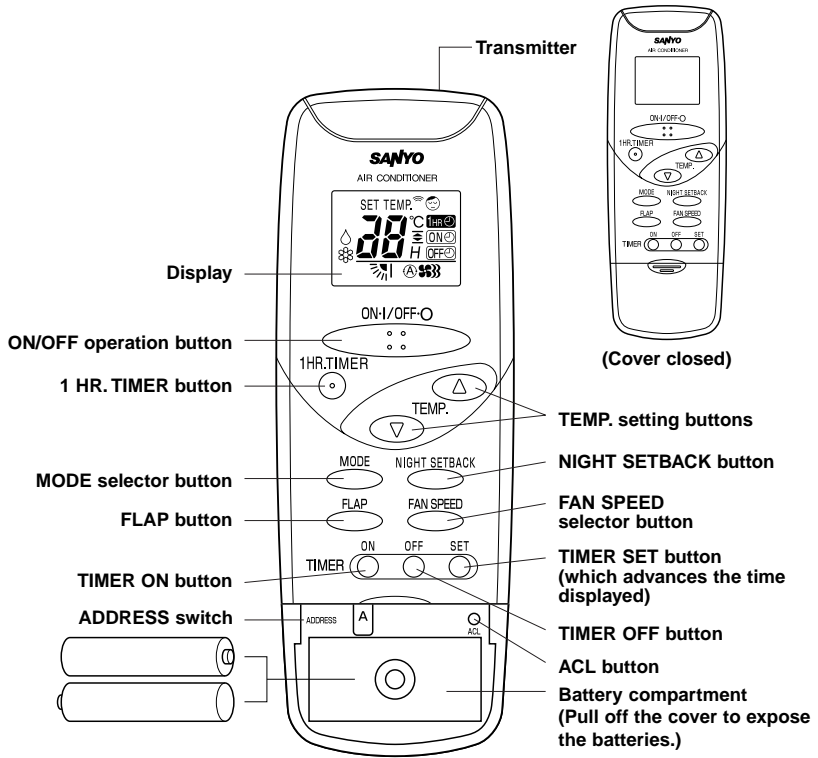

Remote Control Unit
















NOTE

The illustration above pictures the remote control unit after the cover has been lowered and removed.


Transmitter	When you press the buttons on the remote control unit, the  mark appears in the display to transmit the setting changes to the receiver in the air conditioner.
Display	Information on the operating conditions is displayed while the remote control unit is switched on. If the unit is turned off, only the mode that was set previously is still displayed.
NIGHT SETBACK button	For details, see “Night Setback Mode”. When you press this button in the DRY or COOL mode, the  mark appears in the display, and the remote control unit will automatically adjust the set temperature to save energy.
TEMP. setting buttons	Press the  button to increase the set temperature. Press the  button to reduce the set temperature.
ON/OFF operation button	This button is for turning the air conditioner on and off.

Remote Control Unit (continued)

TIMER ON button	 : The air conditioner starts at the set time.
TIMER OFF button	 : The air conditioner stops at the set time.
TIMER SET button	This button is used to set the time at which you wish the air conditioner to go on or off.
MODE selector button (DRY) (COOL)	Use this button to select DRY or COOL mode.  : The air conditioner reduces the humidity in the room.  : The air conditioner makes the room cooler.
FLAP button	Press this button either to select to set the airflow direction to one of the six possible positions manually, or to select the sweep function, which moves the flap up and down automatically.  : The airflow direction can be set manually. (six positions)  : The flap moves up and down automatically. <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-top: 5px;">NOTE</div> To switch to the sweep function () when in the manual () mode, hold down the FLAP button.
FAN SPEED selector button	 : The air conditioner automatically decides the fan speeds.  : High fan speed.  : Medium fan speed.  : Low fan speed.
1 HR. TIMER button (1-HOUR OFF TIMER)	 : When you press this button, regardless of whether the unit is operating or stopping, the unit operates for one hour and then shuts down.
ACL button (ALL CLEAR)	Puts the remote control unit into pre-operation status. Always press this button after replacing the batteries.
ADDRESS switch	<ul style="list-style-type: none"> • The address switch changes to prevent mixing of signals from remote control units when two Sanyo air conditioners are installed next to each other. Normally, the address switch is set to A. When switching the address, the remote control must be changed, and the jumper cables on the indoor unit board must be cut. For more information, please contact the dealer where you made the purchase. • Normally, the tabs on the remote control unit should not bent.

Using the Remote Control Unit

How to Install Batteries

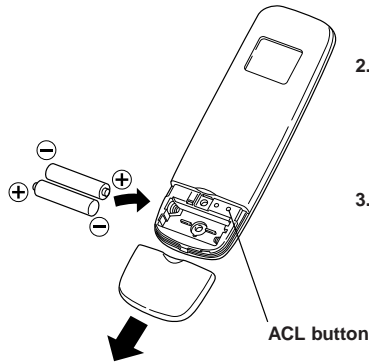


1. Slide the cover in the direction indicated by the arrow and remove it.
2. Install two AAA alkaline batteries. Make sure the batteries point in the direction marked in the battery compartment.
3. Use a thin object such as the tip of a pen to press the ACL button.

NOTE

- The batteries last about six months, depending on how much you use the remote control unit. Replace the batteries when the remote control unit's display fails to light, or when the remote control cannot be used to change the air conditioner's settings.
- Use two fresh leak-proof type-AAA alkaline batteries.
- In replacing batteries, follow the instructions as mentioned in the sub-section "How to Install Batteries".
- If you do not use the remote control unit more than 1 month, take out the batteries.

How to Use the Remote Control Unit

When using the remote control unit, always point the unit's transmitter head directly at the air conditioner's receiver.

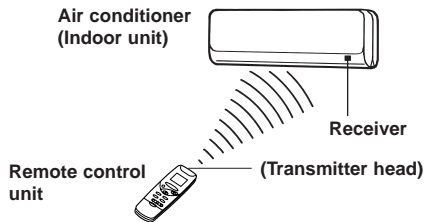

Remote Control Unit Installation Position

The remote control unit may be operated either from a non-fixed position or from a wall-mounted position. To ensure that the air conditioner operates correctly, DO NOT install the remote control unit in the following places:

DO NOT


- In direct sunlight
- Behind a curtain or other places where it is covered
- More than 8 m away from the air conditioner
- In the path of the air conditioner's airstream
- Where it may become extremely hot or cold
- Where it may be subject to electrical or magnetic noise
- Where there is an obstacle between the remote control unit and air conditioner (since a check signal is sent from the remote control unit every 3 minutes)

Using the Remote Control Unit (continued)

Mounting the Remote Control Unit

Truss-head tapping screws
4 × 16mm (supplied)

Remote control unit holder

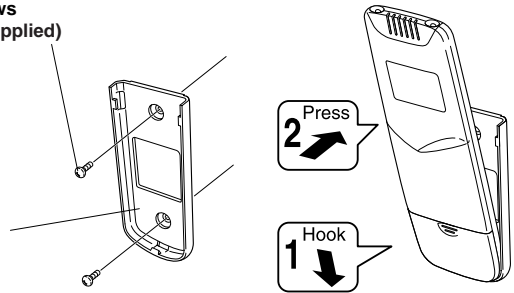

When attaching to wall

- 1) Confirm the indoor unit beeps when the ON/OFF button is pressed at the wall location where the remote control unit is to be attached, then attach the holder to the wall.
- 2) When taking out the remote control unit, pull it from the holder.


When using the remote control unit

- Point the transmission portion of the remote control unit at the receiver area of the indoor unit when operating the remote control unit, and during operation of the air conditioner.
- Do not place objects which may block the transmitted signals between the receiver and the remote control unit.

Truss-head tapping screws
4 × 16mm (supplied)

Holder

Holder

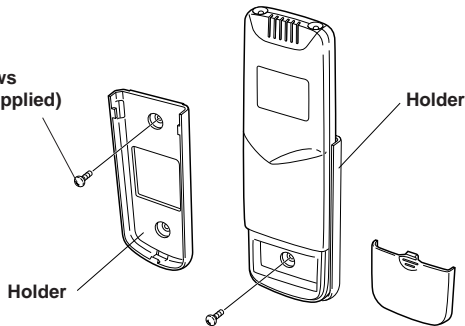


When Mounting the Remote Control Unit to Prevent Theft

- 1) Attach the holder to the wall with one of the screws (using only the hole in the top of the holder).
- 2) Remove the cover of the remote control unit and take out the batteries. Next, place the remote control unit in the holder.
- 3) Fasten both the remote control unit and holder to the wall with the remaining screw (using the hole in the bottom of the holder).
- 4) Install the batteries in the remote control unit and close the cover.

Operation with the Remote Control Unit




1. Operation

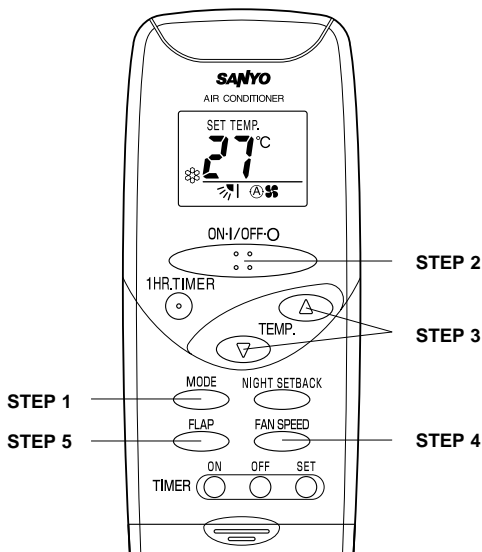

NOTE

Check that the circuit breaker on the power panel is turned on and that the operation selector of the indoor unit is in the ON position.

Press the setting buttons as described below and change the settings as desired.

STEP 1	Press the MODE selector button and select the desired mode. For dehumidifying operation →  For cooling operation → 
STEP 2	To start the air conditioner, press the ON/OFF operation button.
STEP 3	Press the TEMP. setting buttons to change the temperature setting to the desired temperature. Adjustable temperature range: 30 °C max.—16 °C min.
STEP 4	Set the FAN SPEED selector button to the setting you want.
NOTE	If the fan speed is set to  (Automatic), the fan speed switches automatically, according to the difference between the actual room temperature and the temperature setting.
STEP 5	Press the FLAP button and set the airflow direction as desired. (Refer to "Adjusting the Airflow Direction" on page 19.)

To stop the air conditioner, press the ON/OFF operation button again.


Operation with the Remote Control Unit (continued)


NOTE

- This appliance has a built-in 3-minute time delay circuit to ensure reliable operation. When the operation button is pressed, the compressor will start running within three minutes. In the event of power failure, the unit will stop. When the power is restored, the unit will restart automatically after three minutes.

2. Adjusting the Fan Speed

A. Automatic




Simply set the FAN SPEED selector button to the  position.

A microcomputer in the air conditioner automatically controls the fan speed when the  mode is selected. When the air conditioner starts operating, the difference between the room temperature and the set temperature is detected by the microcomputer which then automatically switches the fan speed to the most suitable level.

Cooling and DRY mode:


When difference between room temperature and set temperature is	FAN SPEED
2°C and over	High
Between 2°C and 1°C	Medium
Below 1°C	Low

B. Manual

If you want to adjust fan speed manually during operation, just set the FAN SPEED selector button as desired. [ ,  , or ]

Operation with the Remote Control Unit (continued)

3. Night Setback Mode

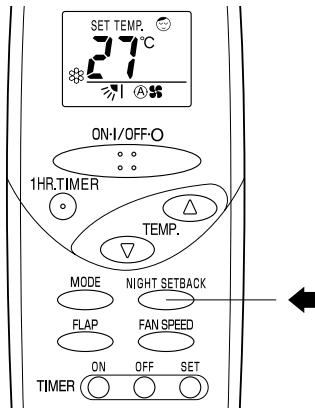


Night Setback Mode is used for saving energy.

Press the NIGHT SETBACK button while operation.
The ☺ mark appears on the display.

To release the night setback function, press the NIGHT SETBACK button again.

In Cooling and DRY Mode:
(❄ and ◊)

When the night setback mode is selected, the air conditioner automatically raises the temperature setting 1°C when 30 minutes have passed after the selection was made, and then another 1°C after another 30 minutes have passed, regardless of the indoor temperature when night setback was selected. This enables you to save energy without sacrificing comfort. This function is convenient when gentle cooling is needed.

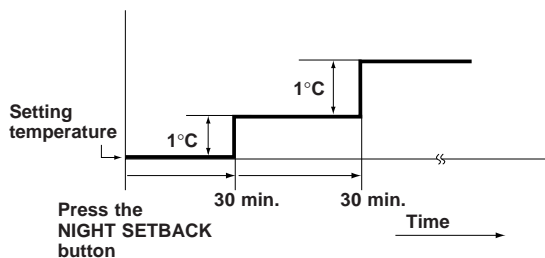

Special Remarks

“DRY” (Δ) Operation

How it works?

- Once the room temperature reaches the level that was set, the unit repeats the cycle of turning on and off automatically.
- During DRY operation, the fan speed is automatically set to LOW or VERY LOW; the fan speed then switches back and forth between LOW (for 20 seconds) and VERY LOW (for 10 seconds).
- “DRY” operation is not possible if the indoor temperature is 15°C or less.

Power failure during operation

- In the event of power failure, the unit will stop. When the power is resumed, the unit will restart automatically after three minutes.

Clicking Sound

Clicking sound is heard from the air conditioner

- In cooling operation, any plastic parts may expand or shrink due to a sudden temperature change. In this event, a clicking sound may occur. This is normal, and the sound will soon disappear.

Remote Control Unit


- The remote control unit sends the setting condition to the air conditioner regularly at three minute intervals.

Using the 12-Hour ON and OFF Timer

2. TIMER ON mode (Example)

After the length of time set for **TIMER ON** elapses, the unit begins operating.

The display depicted at left indicates that the air conditioner will begin operating in three hours.

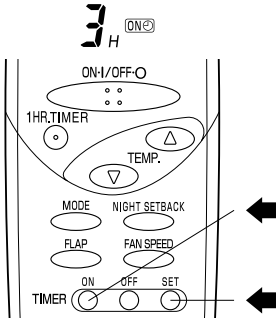

Setting procedure:

STEP 1	Press the MODE button and set the desired operation mode and press the ON/OFF operation button. (See "Operation with the Remote Control Unit", page 12.)
STEP 2	Press the TIMER ON button.
STEP 3	Press the TIMER SET button (which advances the time displayed) to set the time at which you want operation to begin. The time can be set for one to twelve hours, in one hour steps. <div style="text-align: center;"> → 1 → 2 → 3.....12 </div>


- The display changes immediately to its status previous to timer setting, but the **ON/OFF** indication remains.
- To check the status of the timer while it is counting down, press the **TIMER SET** button.

Cancellation procedure: Press the **TIMER ON** button once again.

2. TIMER OFF mode (Example)

After the length of time set for **TIMER OFF** elapses, the unit stops operating.

The display depicted at left indicates that the air conditioner will stop operating in five hours.

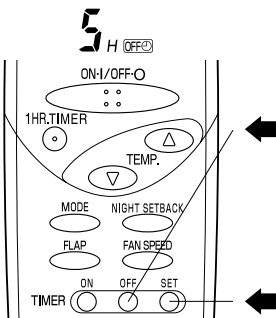

Setting procedure:

STEP 1	Press the TIMER OFF button.
STEP 2	Press the TIMER SET button (which advances the time displayed) to set the time at which you want operation to stop. The time can be set for one to twelve hours, in one hour steps. <div style="text-align: center;"> → 1 → 2 → 3.....12 </div>

- The display changes immediately to its status previous to timer setting, but the **OFF/OFF** indication remains.
- To check the status of the timer while it is counting down, press the **TIMER SET** button.

Cancellation procedure: Press the **TIMER OFF** button once again.

Using the 12-Hour ON and OFF Timer (continued)


3. ON/OFF Parogram Timer

A combination of the TIMER ON and TIMER OFF modes, this function allows you to specify the time that the unit turns on and the time when it turns off.

(Example) The unit will turn on three hours from now, and turn off five hours from now.



TIMER ON display during counting

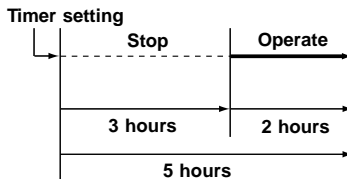

Setting procedure:



TIMER OFF display during counting after 3 hours has elapsed.

STEP 1	Use the procedure described in the "1. TIMER ON mode" section on the preceding page to set the timer to turn the unit on three hours from now.
STEP 2	Use the procedure described in the "2. TIMER OFF mode" section on the preceding page to set the timer to turn the unit off five hours from now.

- The display changes immediately to its status previous to timer setting, but the or indication remains.
- Press the TIMER SET button to display the time remaining on the timer in seconds.
- Note that it is not possible to check both the ON and OFF timer settings. The timer setting that will occur first is given preference and displayed. The timer setting that will occur first is the one with the shorter time setting.

Cancellation procedure:

Press the TIMER ON button and TIMER OFF buttons once again.

NOTE

- **Set the ON and OFF Timers simultaneously.**
Unless you set the 12-Hour ON and OFF Timers at the same time, they may not operate at the specified time.

Using the 1-Hour OFF Timer

1. 1-Hour OFF Timer

This function causes the unit to operate for one hour and then stop, regardless of whether the unit is on or off when this button is pressed.

The **1HR** indicator in the display indicates that this function is operating.

27°C **1HR**

Setting procedure:


Regardless of whether the unit is operating or stopped, press the 1 HR. TIMER button.

1HR appears in the display.

Cancellation procedure:

Press the ON/OFF operation button to turn the unit off, wait for the unit to stop operating, and then press the ON/OFF operation button again.

The 1-Hour Timer function is now cancelled and the unit operates normally.

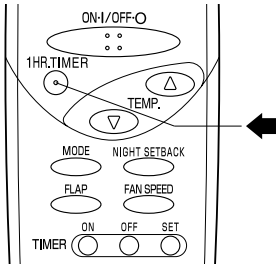

NOTE


- If, while the 1-Hour Timer function is operating, the 1HR. TIMER button is pressed once to cancel the function and then again, the unit continues to operate for one hour from that point in time and then stops.
- If the 1 HR. TIMER button is pressed while the TIMER OFF function operates, the OFF Timer is canceled and the unit will stop operating one hour later.

2. Combining the 1-Hour OFF Timer and 12-Hour ON Timer

By combining the 1-Hour OFF Timer and 12-Hour ON Timer, it is possible to have the unit operate for just one hour from the present time, and then have it switch on again later at a time specified by you.

(Example) Having the unit operate for just one hour from the present time, and then switch on again three hours from the present time.

Timer setting

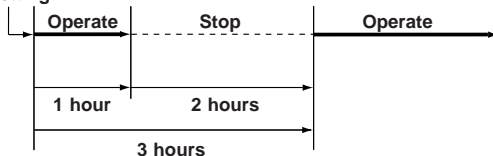

Setting procedure:

STEP 1	Press the 1 HR. TIMER button.
STEP 2	Press the TIMER ON button and use the TIMER SET button to set the unit to turn on three hours later.


NOTE

- **Set the 1-Hour OFF Timer and the 12-Hour ON Timer simultaneously.** Unless you set the 1-Hour OFF Timer and the 12-Hour ON Timer at the same time, the 1-Hour OFF Timer may operate for one hour or more.

Adjusting the Airflow Direction

1. Horizontal

The horizontal airflow can be adjusted by moving the vertical vanes with your hands to the left or right.



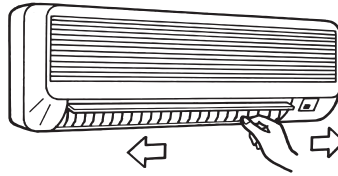


CAUTION

When the humidity is high, the vertical vanes should be in the front position during the cooling or dehumidifying operation. If the vertical vanes are positioned all of the way to the right or left, condensation may begin to form around the air vent and drip down.

2. Vertical

The vertical airflow can be adjusted by moving the flap with the remote control unit. Do not move the flap with your hands. Confirm that the remote control unit has been turned on. Use the FLAP button to set either the sweep function or one of the six airflow direction settings.

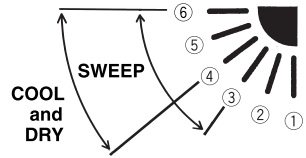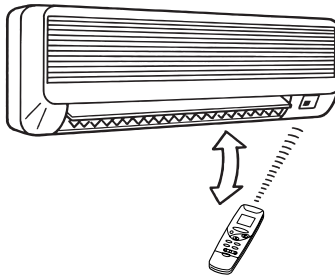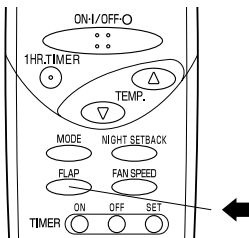

A. Sweep function



The flap starts moving up and down to deliver air over the sweep range.

B. Setting the Airflow Manually



Referring to the above illustration, use the FLAP button to set the airflow direction within the range used during the cooling or dehumidifying operation.

NOTE




CAUTION

- The flap automatically closes when the unit is off.
- Use the FLAP button on the remote control to adjust the position of the flap. If you move the flap by hand, the flap position according to the remote control and the actual flap position may no longer match. If this should happen, shut off the unit, wait for the flap to close, and then turn on the unit again; the flap position will now be normal again.
- Do not have the flap pointed down during cooling operation. Condensation may begin to form around the air vent and drip down.

Operation without the Remote Control Unit

INDOOR UNIT

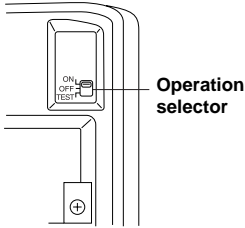

If you have lost the remote control unit or it has trouble, follow the steps below.

1. When the air conditioner is not running
If you want to turn on the air conditioner, switch the operation selector to the OFF position, and then to the ON position.

NOTE

The set temperature and fan speed are automatically set at the last selection before stopping.

2. When the air conditioner is running
If you want to turn off the air conditioner, switch the operation selector to the OFF position.

Care and Cleaning



WARNING

Casing and Grille (Indoor Unit)

1. For safety, be sure to turn the air conditioner off and also to disconnect the power before cleaning.
2. Do not pour water on the unit to clean it. This will damage the internal components and cause an electric shock hazard.

Clean the casing and grille of the indoor unit with a vacuum cleaner brush, or wipe them with a clean, soft cloth.

If these parts are stained, use a clean cloth moistened with a mild liquid detergent. When cleaning the grille, be careful not to force the vanes out of place.



CAUTION

1. Never use solvents, or harsh chemicals when cleaning the indoor unit. Do not wipe the plastic casing using very hot water.
2. Some metal edges and the fins are sharp and may cause injury if handled improperly; be especially careful when you clean these parts.
3. The internal coil and other components of the outdoor unit must be cleaned every year. Consult your dealer or service center.


Care and Cleaning (continued)

Anti-Mold Filter

The anti-mold filter behind the air intake grille should be checked and cleaned at least once every two weeks.

How to remove the anti-mold filter

1. Grasp both ends of the air intake grille and pull it out and up.
2. Push the anti-mold filter up slightly, and then pull it down.

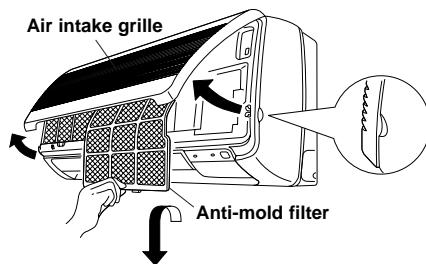


Cleaning

Use a vacuum cleaner to remove light dust. If there is sticky dust on the filter, wash the filter in lukewarm, soapy water, rinse it in clean water, and dry it.

How to replace the anti-mold filter

1. With the "FRONT" mark facing you, slide the anti-mold filter up into the unit and then lower the handle into the groove on the unit.
2. After installing the anti-mold filter, press the locations marked by the arrows (↕) and close the air intake grille.

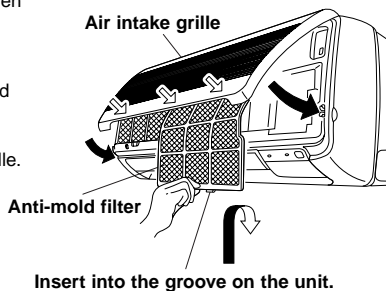

Care and Cleaning (continued)

Air Cleaning Filter (not provided)

The air cleaning filter removes dust and dirt from the air, and reduces odors and smoke from tobacco.

NOTE

The air clean filter is not provided with the air conditioner and must be purchased separately.
Ask for the **STK-F4B** model when purchasing.



WARNING


This air cleaning filter cannot remove harmful gases or vapors nor ventilate air in the room. You must open doors or windows frequently when you use gas or oil heating appliances. Otherwise there is a risk of suffocation in extreme cases.

How to install the air cleaning filter

The air cleaning filter needs to be installed behind the anti-mold filter.

1. Remove the anti-mold filter.
2. To mount the STK-F4B, set the air clean filter(sold separately) at the mounting position with the black side facing the rear.
3. Reinstall the anti-mold filter, and close the suction grill.

Air clean filter

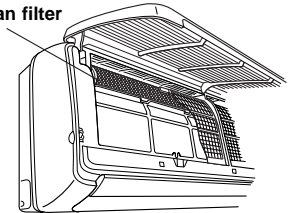

NOTE

Dirty air clean filters cannot be washed and reused. Purchase a replacement filter at your local dealer.


Cleaning the main unit and remote controle unit

- Wipe clean using a soft, dry cloth.
- To remove stubborn dirt, moisten a cloth in warm water no hotter than 40°C, wring thoroughly, and then wipe.
- The air intake grille can be removed in order to wash it with water.

Removing and remounting the air intake grille

With the air intake grille open all the way, grip both arms with your hands and pull toward you to remove. To remount, hold the air intake grille roughly horizontal and push it in until the arm shafts fit into the indentations in the main unit, then fit the grille into place.

Air intake grille

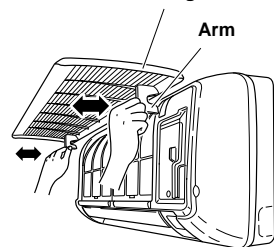

CAUTION

When using a footstool or the like, be careful not to let it tip over.

Washing the grille with water

- Clean the grille gently using a soft sponge, or the like. Then wipe away any remaining moisture.
- Neutral detergent may be used to remove stubborn dirt. Then rinse thoroughly with water and wipe away any remaining moisture.

Troubleshooting

If your air conditioner does not work properly, first check the following points before requesting service. If it still does not work properly, contact your dealer or service center.

Trouble	Possible cause	Remedy
Air conditioner does not run at all.	<ol style="list-style-type: none"> 1. Power failure. 2. Leakage circuit breaker tripped. 3. Line voltage is too low. 4. Operation button is OFF. 5. Batteries in remote control unit have run down. 	<ol style="list-style-type: none"> 1. Restore power. 2. Contact service center. 3. Consult your electrician or dealer. 4. Press the button again. 5. Replace batteries.
OPERATION lamp flashes and air conditioner does not operate.	Trouble in wiring system.	Contact service center.
Compressor runs but soon stops.	Obstruction in front of condenser coil.	Remove obstruction.
Poor cooling performance.	<ol style="list-style-type: none"> 1. Dirty or clogged air filter. 2. Heat source or many people in room. 3. Doors and/or windows are open. 4. Obstacle near air intake or air discharge port. 5. Thermostat is set too high for cooling. 	<ol style="list-style-type: none"> 1. Clean air filter to improve airflow. 2. Eliminate heat source if possible. 3. Shut them to keep the heat out. 4. Remove it to ensure good airflow. 5. Set the temperature lower.
Clicking sound is heard from the air conditioner.	In cooling operation, any plastic parts may expand or shrink due to a sudden temperature change. In this event, a clicking sound may occur.	This is normal, and the sound will soon disappear.
OPERATION lamp lights but outdoor unit will not run.	<ol style="list-style-type: none"> 1. The use of portable telephones near the air conditioner may cause disturbance to its normal operation. 	<ol style="list-style-type: none"> 1. Turn off the power then restart the air conditioner after 1 minute. 2. Consult your dealer.

Tips for Energy Saving

- Do not**
- **Block the air intake and outlet of the unit. If they are obstructed, the unit will not work well, and may be damaged.**
 - Let direct sunlight into the room. Use sunshades, blinds or curtains. If the walls and ceiling of the room are warmed by the sun, it will take longer to cool the room.
- Do**
- Always try to keep the air filter clean. (Refer to "Care and Cleaning".) A clogged filter will impair the performance of the unit.
 - To prevent conditioned air from escaping, keep windows, doors and any other openings closed.



SANYO Electric Co.,Ltd.

Osaka, Japan

SM700456 10/00/200

Printed in Japan